
PROLIGHT SPAIN

PIXEL BAR 200

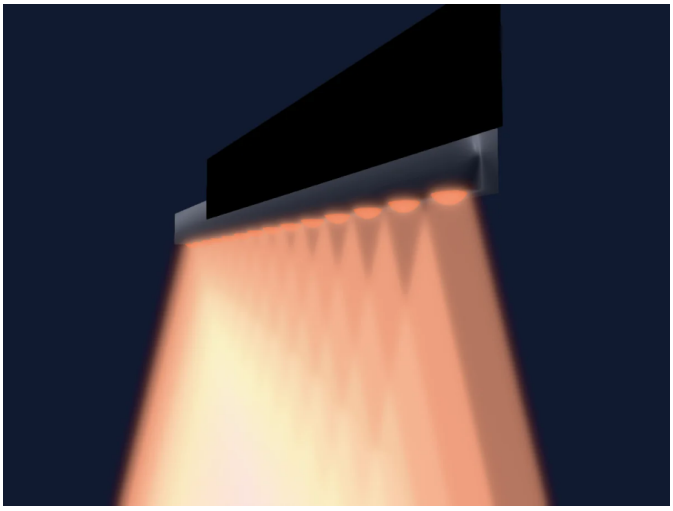

Manufacturer	**PROLIGHT SPAIN**
Type	**LED bar**
DMX modes	**3**
DMX footprint	**3, 7, 72 channels**
Beam angle	**25°**
Heads / cells	**14**
Size (W × H × D)	**980 × 86 × 80 mm**
GDTF fixture type	**FE32C536-EEAF-4B1B-9526-449…**

Controls

Extra LED colours · RGB colour mixing · Effect speed · Dimmer · Pixel control

Safety-relevant functions

Built-in effect programmes

DMX modes

3ch	3 ch
7ch	7 ch
72ch	72 ch

3ch

3 channels

Ch	Function	Default	DMX values
1	Effect	0	0–6 Black-out 7–13 Red 14–20 Green 21–27 Blue 28–34 White 35–41 Amber 42–48 Yellow 49–55 Magenta 56–62 Red+amber 63–69 Cyan 70–76 Green+white 77–83 Green+amber 84–90 Blue+amber 91–97 Red+green+amber 98–104 Green+blue+amber 105–111 Macro1 112–118 Macro2 119–125 Macro3 126–132 Macro4 133–139 Macro5 140–146 Macro6 147–156 Macro7 157–160 Macro8 161–167 Macro9 168–174 Macro10 175–181 Macro11 182–188 Sound1 189–195 Sound2 196–202 Sound3 203–209 Sound4 210–216 Sound5 217–223 Sound6 224–230 Sound7 231–237 Sound8 238–244 Sound9 245–251 Sound10 252–255 Sound11
2	Effect Speed	0	0–0 min speed 1–254 slow to fast 255–255 max speed
3	Shutter1Strobe	0	0–11 Open 12–12 min strobe 13–254 slow to fast 255–255 max strobe

7ch

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	0	
6	Color Add RY	0	

7ch (continued)

Ch	Function	Default	DMX values
7	Shutter1Strobe	0	0–11 Open 12–12 min strobe 13–254 slow to fast 255–255 max strobe

72ch

72 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	0	
6	Color Add RY	0	
7	Red	255	
8	Green	255	
9	Blue	255	
10	White	0	
11	Color Add RY	0	
12	Red	255	
13	Green	255	
14	Blue	255	
15	White	0	
16	Color Add RY	0	
17	Red	255	
18	Green	255	
19	Blue	255	
20	White	0	
21	Color Add RY	0	
22	Red	255	
23	Green	255	
24	Blue	255	
25	White	0	
26	Color Add RY	0	
27	Red	255	
28	Green	255	
29	Blue	255	
30	White	0	
31	Color Add RY	0	
32	Red	255	
33	Green	255	
34	Blue	255	
35	White	0	
36	Color Add RY	0	
37	Red	255	
38	Green	255	

72ch (continued)

Ch	Function	Default	DMX values
39	Blue	255	
40	White	0	
41	Color Add RY	0	
42	Red	255	
43	Green	255	
44	Blue	255	
45	White	0	
46	Color Add RY	0	
47	Red	255	
48	Green	255	
49	Blue	255	
50	White	0	
51	Color Add RY	0	
52	Red	255	
53	Green	255	
54	Blue	255	
55	White	0	
56	Color Add RY	0	
57	Red	255	
58	Green	255	
59	Blue	255	
60	White	0	
61	Color Add RY	0	
62	Red	255	
63	Green	255	
64	Blue	255	
65	White	0	
66	Color Add RY	0	
67	Red	255	
68	Green	255	
69	Blue	255	
70	White	0	
71	Color Add RY	0	
72	Shutter1Strobe	0	