
Prolights

EclParDOTVW

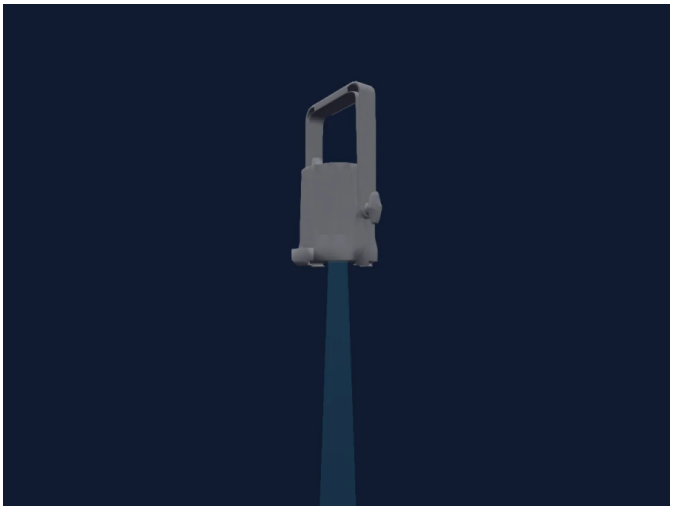

Manufacturer	**Prolights**
Type	**PAR**
DMX modes	**7**
DMX footprint	**1, 2, 3, 4, 9 channels**
Beam angle	**4.6°**
Size (W × H × D)	**164 × 186 × 31 mm**
GDTF fixture type	**E27A9520-3143-4541-AED1-08…**

Controls

Extra LED colours · Colour temperature · Strobe · Dimmer

Safety-relevant functions

Service functions · Strobe

DMX modes

UNO	1 ch
2ch	2 ch
DUO	2 ch
3ch	3 ch
4ch_1	4 ch
4ch_2	4 ch
9ch	9 ch

UNO

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open

2ch

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	101	0–254 2700K 255–255 6500K

DUO

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer

3ch

3 channels

Ch	Function	Default	DMX values
1	Color Add WW	255	
2	Color Add CW	255	
3	No Feature	0	

4ch_1

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	101	0–254 2700K 255–255 6500K
4	No Feature	0	

4ch_2

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Color Add WW	255	
3	Color Add CW	255	
4	No Feature	0	

9ch

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open

9ch (continued)

Ch	Function	Default	DMX values
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	255	0–1 Open 2–62 Strobe 63–64 Open 65–125 PulseInStrobe 126–127 Closed 128–188 PulseOutStrobe 189–190 Open 191–251 RandomStrobe 252–255 Open
4	C TC	101	0–254 2700K 255–255 6500K
5	C CTRAW	0	0–254 CCT 255–255 WW/CW
6	Color Add WW	255	
7	Color Add CW	255	
8	No Feature	0	
9	Control1	0	0–1 NoFeature 2–3 Display ON 4–5 Display 10s 6–7 Display 20s 8–9 Display 30s 10–11 Flip Display ON 12–13 Flip Display OFF 14–15 Key Lock ON 16–17 Key Lock OFF 18–19 Celsius 20–21 Fahrenheit 22–23 Linear 24–25 S-Curve 26–27 Square Law 28–29 Inverse Square Law 30–31 Auto 32–33 Fast 34–35 Medium 36–37 Slow 38–39 OFF 40–41 WHITE CALIBRATION OFF 42–43 WHITE CALIBRATION MANUAL 44–45 1000 Hz 46–47 2000 Hz 48–49 4000 Hz 50–51 6000 Hz 52–53 25 kHz 54–55 Hold 56–57 BlackOut 58–59 StandAlone 60–61 Master DMX 62–63 Master NO DMX 64–65 SLAVE 66–67 Effects 68–69 CCT Presets 70–71 White Presets 72–73 Manual WW / CW 74–251 NoFeature 1 252–253 FactoryDefault 254–255 NoFeature 2