
Prolights

EclParIPLVW_15

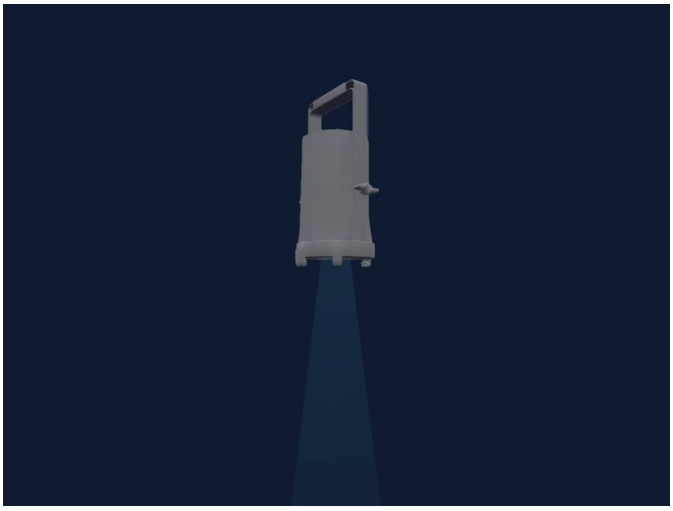

Manufacturer	**Prolights**
Type	**Spot**
DMX modes	**7**
DMX footprint	**1, 2, 4, 5, 9, 11 channels**
Beam angle	**15.4°**
Size (W × H × D)	**272 × 300 × 66 mm**
GDTF fixture type	**DC8643E2-B39C-4F50-9B7F-1D…**

Controls

Extra LED colours · Colour temperature · Strobe · Dimmer

Safety-relevant functions

Service functions · Strobe

DMX modes

UNO	1 ch
Basic	2 ch
DUO	2 ch
Basic 16bit	4 ch
Standard	5 ch
Extended	9 ch
Advanced	11 ch

UNO

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open

Basic

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	C TC	101	0–254 2700K 255–255 6500K

DUO

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer

Basic 16bit

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	101	0–254 2700K 255–255 6500K
4	C TC Fine	13	Fine byte of C TC

Standard

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	101	0–254 2700K 255–255 6500K
4	Shutter / Strobe	255	0–1 Open 2–62 Strobe 63–64 Open 65–125 PulseInStrobe 126–127 Closed 128–188 PulseOutStrobe 189–190 Open 191–251 RandomStrobe 252–255 Open

Standard (continued)

Ch	Function	Default	DMX values
5	Control1	0	0–1 NoFeature 2–3 Display ON 4–5 Display 10s 6–7 Display 20s 8–9 Display 30s 10–11 Flip Display ON 12–13 Flip Display OFF 14–15 Key Lock ON 16–17 Key Lock OFF 18–19 Linear 20–21 S-Curve 22–23 Square Law 24–25 Inverse Square Law 26–27 Auto 28–29 Fast 30–31 Medium 32–33 Slow 34–35 OFF 36–37 600 Hz 38–39 1200 Hz 40–41 2000 Hz 42–43 4000 Hz 44–45 6000 Hz 46–47 25 KHz 48–49 36 KHz 50–51 40 KHz 52–53 Hold 54–55 BlackOut 56–57 StandAlone 58–59 Emergency 60–61 Constant - Instant Power Limit 62–63 Dynamic - Max Power according with temperature 64–65 Master DMX 66–67 Master NO DMX 68–69 SLAVE 70–71 Effects 72–73 CCT Presets 74–75 Manual WW / CW 76–249 NoFeature 1 250–251 FactoryDefault 252–255 NoFeature 2

Extended

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	101	0–254 2700K 255–255 6500K
4	C TC Fine	13	Fine byte of C TC
5	C CTRAW	0	0–254 CCT 255–255 WW/CW
6	Color Add WW	255	
7	Color Add CW	255	

Extended (continued)

Ch	Function	Default	DMX values
8	Shutter / Strobe	255	0–1 Open 2–62 Strobe 63–64 Open 65–125 PulseInStrobe 126–127 Closed 128–188 PulseOutStrobe 189–190 Open 191–251 RandomStrobe 252–255 Open
9	Control1	0	0–1 NoFeature 2–3 Display ON 4–5 Display 10s 6–7 Display 20s 8–9 Display 30s 10–11 Flip Display ON 12–13 Flip Display OFF 14–15 Key Lock ON 16–17 Key Lock OFF 18–19 Linear 20–21 S-Curve 22–23 Square Law 24–25 Inverse Square Law 26–27 Auto 28–29 Fast 30–31 Medium 32–33 Slow 34–35 OFF 36–37 600 Hz 38–39 1200 Hz 40–41 2000 Hz 42–43 4000 Hz 44–45 6000 Hz 46–47 25 KHz 48–49 36 KHz 50–51 40 KHz 52–53 Hold 54–55 BlackOut 56–57 StandAlone 58–59 Emergency 60–61 Constant - Instant Power Limit 62–63 Dynamic - Max Power according with temperature 64–65 Master DMX 66–67 Master NO DMX 68–69 SLAVE 70–71 Effects 72–73 CCT Presets 74–75 Manual WW / CW 76–249 NoFeature 1 250–251 FactoryDefault 252–255 NoFeature 2

Advanced

11 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	101	0–254 2700K 255–255 6500K
4	C TC Fine	13	Fine byte of C TC

Advanced (continued)

Ch	Function	Default	DMX values
5	C CTRAW	0	0–254 CCT 255–255 WW/CW
6	Color Add WW	255	
7	Color Add WW Fine	255	Fine byte of Color Add WW
8	Color Add CW	255	
9	Color Add CW Fine	255	Fine byte of Color Add CW
10	Shutter / Strobe	255	0–1 Open 2–62 Strobe 63–64 Open 65–125 PulseInStrobe 126–127 Closed 128–188 PulseOutStrobe 189–190 Open 191–251 RandomStrobe 252–255 Open
11	Control1	0	0–1 NoFeature 2–3 Display ON 4–5 Display 10s 6–7 Display 20s 8–9 Display 30s 10–11 Flip Display ON 12–13 Flip Display OFF 14–15 Key Lock ON 16–17 Key Lock OFF 18–19 Linear 20–21 S-Curve 22–23 Square Law 24–25 Inverse Square Law 26–27 Auto 28–29 Fast 30–31 Medium 32–33 Slow 34–35 OFF 36–37 600 Hz 38–39 1200 Hz 40–41 2000 Hz 42–43 4000 Hz 44–45 6000 Hz 46–47 25 KHz 48–49 36 KHz 50–51 40 KHz 52–53 Hold 54–55 BlackOut 56–57 StandAlone 58–59 Emergency 60–61 Constant - Instant Power Limit 62–63 Dynamic - Max Power according with temperature 64–65 Master DMX 66–67 Master NO DMX 68–69 SLAVE 70–71 Effects 72–73 CCT Presets 74–75 Manual WW / CW 76–249 NoFeature 1 250–251 FactoryDefault 252–255 NoFeature 2