
Prolights

EclProfileFWTU_26

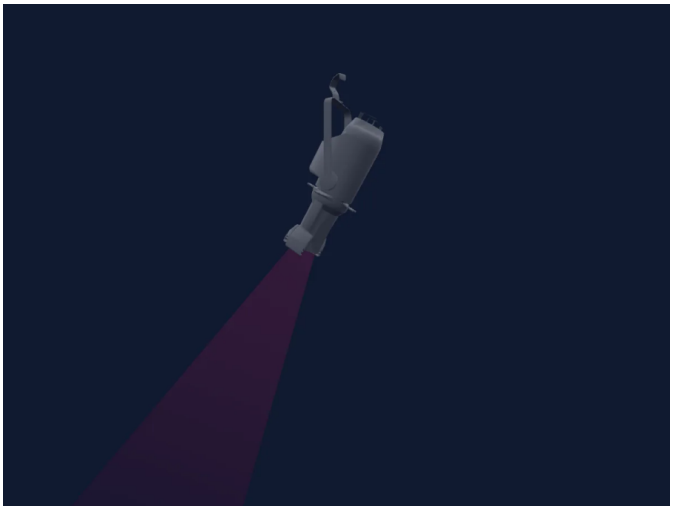

Manufacturer	**Prolights**
Type	**Profile spot**
DMX modes	**4**
DMX footprint	**1, 2, 3, 4 channels**
Beam angle	**26.24°**
Pan range	**360°**
Tilt range	**360°**
Size (W × H × D)	**264 × 634 × 264 mm**
GDTF fixture type	**D67DA219-8743-4AA5-B4DA-5…**

Controls

Strobe · Dimmer

Safety-relevant functions

Fixture reset · Service functions · Strobe

DMX modes

1ch_Uno	1 ch
2ch_Duo	2 ch
3ch_Standard	3 ch
4ch_Extended	4 ch

1ch_Uno

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open

2ch_Duo

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer

3ch_Standard

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	255	0–1 Closed 2–62 Strobe 63–64 Open 65–125 PulseInStrobe 126–127 Open 128–188 PulseOutStrobe 189–190 Open 191–251 RandomStrobe 252–255 Open

4ch_Extended

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	255	0–1 Closed 2–62 Strobe 63–64 Open 65–125 PulseInStrobe 126–127 Open 128–188 PulseOutStrobe 189–190 Open 191–251 RandomStrobe 252–255 Open

4ch_Extended (continued)

Ch	Function	Default	DMX values
4	Control1	0	0–1 NoFunction 2–3 Backlight ON 4–5 Backlight 10s 6–7 Backlight 20s 8–9 Backlight 30s 10–11 Flip Display ON 12–17 Flip Display OFF 18–19 Linear 20–21 S-Curve 22–23 Square Law 24–25 Inverse Square Law 26–27 Auto 28–29 Slow 30–31 Medium 32–33 Fast 34–35 625 Hz 36–37 1282 Hz 38–39 2500 Hz 40–41 5000 Hz 42–43 6400 Hz 44–45 25 kHz 46–47 Auto 48–49 Silent 50–51 HIgh 52–53 OFF 54–55 Hold 56–57 Blackout 58–59 Stand Alone 60–253 NoFeature 254–255 Reset all Control function