
Prolights

JetPar7ZIP

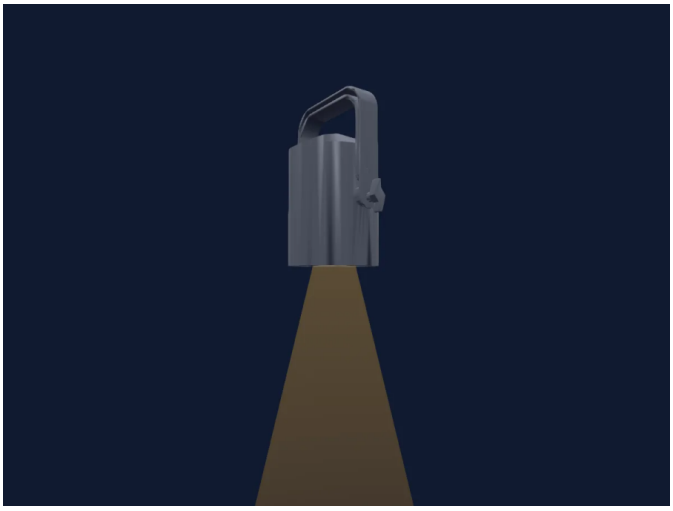

Manufacturer	**Prolights**
Type	**PAR**
DMX modes	**6**
DMX footprint	**1, 2, 6, 12, 14, 20 channels**
Beam angle	**4-52°**
Size (W × H × D)	**312 × 273 × 45 mm**
GDTF fixture type	**2C3EEEB2-F24D-4F8C-9127-5C…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer

Safety-relevant functions

Strobe

DMX modes

UNO_1ch	1 ch
DUO_2ch	2 ch
Basic	6 ch
Basic_16bit	12 ch
Standard_14ch	14 ch
Extended_20ch	20 ch

UNO_1ch

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open

DUO_2ch

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer

Basic

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	
6	Zoom	128	

Basic_16bit

12 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	
4	Red Fine	255	Fine byte of Red
5	Green	255	
6	Green Fine	255	Fine byte of Green
7	Blue	255	
8	Blue Fine	255	Fine byte of Blue
9	White	255	
10	White Fine	255	Fine byte of White
11	Zoom	128	
12	Zoom Fine	0	Fine byte of Zoom

Standard_14ch

14 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	128	0–254 2800K 255–255 10000K

Standard_14ch (continued)

Ch	Function	Default	DMX values
4	Tint	128	0–127 Tint -25 128–254 Tint 0 255–255 Tint +25
5	C TCColor Cross Fade	255	0–254 CTC 255–255 Colors
6	Red	255	
7	Green	255	
8	Blue	255	
9	White	255	
10	Color Macro1	0	
11	Shutter / Strobe	255	0–1 Shutter_Open 2–61 Strobe_Slow 62–62 Strobe_Fast 63–64 Shutter_Open 65–124 StrobePulseIN_Slow 125–125 StrobePulseIN_Fast 126–127 Shutter_Close 128–187 StrobePulseOUT_Slow 188–188 StrobePulseOUT_Fast 189–190 Shutter_Open 191–250 RandomStrobe_Slow 251–251 RandomStrobe_Fast 252–255 Shutter_Open
12	Zoom	128	
13	Zoom Fine	0	Fine byte of Zoom
14	Control1	0	

Extended_20ch

20 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	128	0–254 2800K 255–255 10000K
4	C TC Fine	128	Fine byte of C TC
5	Tint	128	0–127 Tint -25 128–254 Tint 0 255–255 Tint +25
6	C TCColor Cross Fade	255	0–254 CTC 255–255 Colors
7	Red	255	
8	Red Fine	255	Fine byte of Red
9	Green	255	
10	Green Fine	255	Fine byte of Green
11	Blue	255	
12	Blue Fine	255	Fine byte of Blue
13	White	255	
14	White Fine	255	Fine byte of White
15	Color Macro1	0	

Extended_20ch (continued)

Ch	Function	Default	DMX values
16	Color Control	0	0–254 CTO On Colors min 255–255 CTO On Colors max
17	Shutter / Strobe	0	0–1 Shutter_Open 2–61 Strobe_Slow 62–62 Strobe_Fast 63–64 Shutter_Open 65–124 StrobePulseIN_Slow 125–125 StrobePulseIN_Fast 126–127 Shutter_Close 128–187 StrobePulseOUT_Slow 188–188 StrobePulseOUT_Fast 189–190 Shutter_Open 191–250 RandomStrobe_Slow 251–251 RandomStrobe_Fast 252–255 Shutter_Open
18	Zoom	128	
19	Zoom Fine	0	Fine byte of Zoom
20	Control1	0	