
Prolights

LumiPix12UQPro

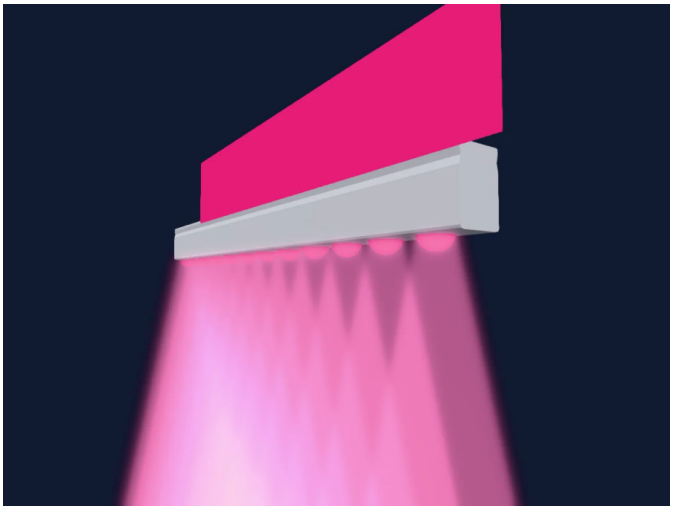

Manufacturer	**Prolights**
Type	**LED bar**
DMX modes	**1**
DMX footprint	**17 channels**
Beam angle	**23°**
Heads / cells	**3**
Size (W × H × D)	**1000 × 144 × 63 mm**
GDTF fixture type	**3CFC6E69-9424-4413-934F-252…**

Controls

Colour wheel · Strobe · Dimmer · Pixel control

Safety-relevant functions

Built-in effect programmes

DMX modes

17ch 17 ch

17ch

17 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	255	
5	Red	255	
6	Green	255	
7	Blue	255	
8	White	255	
9	Red	255	
10	Green	255	
11	Blue	255	
12	White	255	
13	Color Macro1	0	0–10 NoFeature 11–30 Macro1 31–50 Macro2 51–70 Macro3 71–90 Macro4 91–110 Macro5 111–130 Macro6 131–150 Macro7 151–170 Macro8 171–200 Macro9 201–205 Macro10 206–210 Macro11 211–215 Macro12 216–220 Macro13 221–225 MAcro14 226–230 Macro15 231–235 Macro16 236–240 Macro17 241–245 Macro18 246–250 Macro19 251–255 Macro20
14	Shutter / Strobe	10	0–0 Slow 1–9 Slow2Fast 10–10 Open 11–15 SoundSensivity Values 16–254 Strobe · Slow2Fast 0.9–14.9 Hz 255–255 Fast

17ch (continued)

Ch	Function	Default	DMX values
15	Effect	0	0–31 NoFeature 32–63 Pulse effect 0%-100% 64–95 Pulse effect 100%-0% 96–114 Pulse effect 100%-0%-100% 115–122 AutoProgram_1 123–130 AutoProgram_2 131–138 AutoProgram_3 139–146 AutoProgram_4 147–154 AutoProgram_5 155–162 AutoProgram_6 163–170 AutoProgram_7 171–178 AutoProgram_8 179–186 AutoProgram_9 187–194 AutoProgram_10 195–202 AutoProgram_11 203–210 AutoProgram_12 211–218 AutoProgram_13 219–226 AutoProgram_14 227–255 SoundProgram
16	Dimmer	0	0–254 Closed 255–255 Open
17	Dimmer Mode	0	0–51 PresetAsMenu 52–101 Off 102–152 Fast 153–203 Mid 204–255 Slow