
Prolights

StudioCobPlusFC2_18

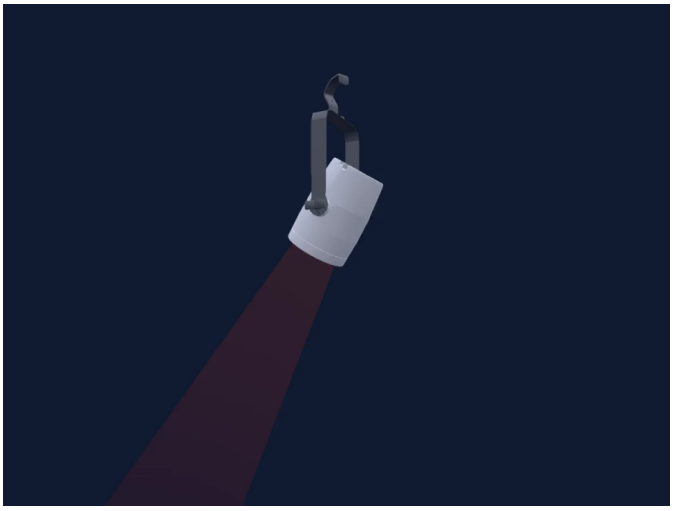

Manufacturer	**Prolights**
Type	**Moving head**
DMX modes	**3**
DMX footprint	**4, 6, 10 channels**
Beam angle	**17.8°**
Pan range	**360°**
Tilt range	**360°**
Size (W × H × D)	**210 × 257 × 186 mm**
GDTF fixture type	**79BFC372-5C5D-444A-B0CE-C9…**

Controls

Extra LED colours · RGB colour mixing · Effect speed · Strobe · Dimmer

Safety-relevant functions

Strobe · Built-in effect programmes

DMX modes

4ch	4 ch
6ch	6 ch
10ch	10 ch

4ch

4 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	

6ch

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	
6	Shutter / Strobe	0	0–30 Open 31–31 Slow Strobe 32–99 Strobe 100–100 Fast Strobe 101–130 Opoen 131–131 Slow RND Strobe 132–199 RND Strobe 200–200 Fast RND Strobe 210–255 Open

10ch

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	255	
6	Shutter / Strobe	0	0–30 Open 31–31 Slow Strobe 32–99 Strobe 100–100 Fast Strobe 101–130 Opoen 131–131 Slow RND Strobe 132–199 RND Strobe 200–200 Fast RND Strobe 210–255 Open
7	Effect	0	0–10 NoFeature 11–85 ColorPresets 86–170 WhitePresets 171–255 ColorMacro

10ch (continued)

Ch	Function	Default	DMX values
8	Effects1Adjust1	0	0–28 R 100 G 0-100 B 0 29–40 R 100-0 G 100 B 0 41–56 3000K-4000K 57–60 R 0 G 100 B 0-100 61–70 AutoProgram2 71–84 4000K-5000K 85–100 R 0 G 100-0 B 100 101–110 5000K-6000K 111–112 AutoProgram1 113–130 R 0-100 G 0 B 100 131–140 6000K>7000K 141–160 R 100 G 0 B 100-0 161–168 7000K>8000K 169–190 R 100 G 0-100 B 0-100 191–196 8000K>9000K 197–210 R 100-0 G 100-0 B 100 211–220 AutoProgram5 (1-4) 221–224 9000K-10000K 225–255 R 100 G 100 B 100 W 100
9	Effect Speed	0	0–0 Slow rate 1–254 Effect Rate 255–255 Fast Rate
10	Dimmer Mode	0	0–0 Dimmer Speed Fast 1–254 Dimmer Speed 255–255 Dimmer Speed Slow