
Prolights

StudioCobPlusTW_36

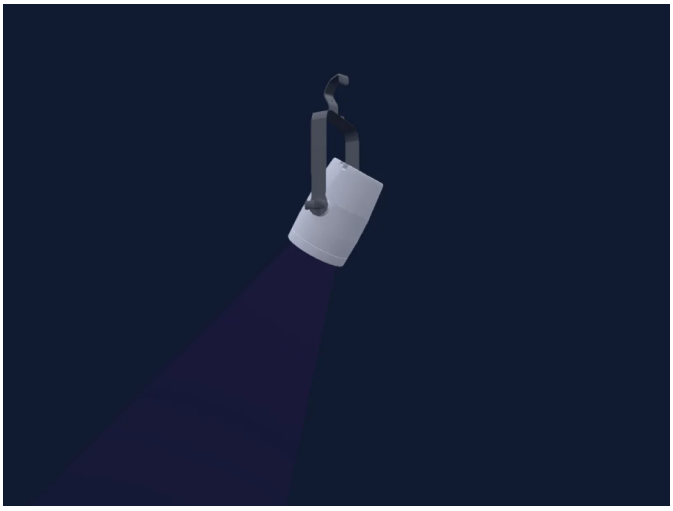

Manufacturer	**Prolights**
Type	**Moving head**
DMX modes	**4**
DMX footprint	**2, 4, 5, 7 channels**
Beam angle	**36°**
Pan range	**360°**
Tilt range	**360°**
Size (W × H × D)	**210 × 257 × 186 mm**
GDTF fixture type	**FC9EB655-4D05-4DE8-8B14-CC…**

Controls

Extra LED colours · Colour temperature · Effect speed · Strobe · Dimmer

Safety-relevant functions

Built-in effect programmes

DMX modes

2ch	2 ch
4ch	4 ch
5ch	5 ch
7ch	7 ch

2ch

2 channels

Ch	Function	Default	DMX values
1	Color Add WW	255	
2	Color Add CW	255	

4ch

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Color Add WW	255	
3	Color Add CW	255	
4	Shutter / Strobe	0	0–30 Open 31–100 Strobe · Slow2Fast 0.9–15 Hz 101–130 Opoen 131–200 Random · Slow2Fast 0.9–15 Hz 210–255 Open

5ch

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	C TC	0	0–10 2800K 11–36 3000K 37–62 3200K 63–88 3500K 89–114 4000K 115–140 5000K 141–166 5600K 167–192 6000K 193–255 Reserved
4	Shutter / Strobe	0	0–30 Open 31–100 Strobe · Slow2Fast 0.9–15 Hz 101–130 Opoen 131–200 Random · Slow2Fast 0.9–15 Hz 210–255 Open
5	Dimmer Mode	0	0–51 AsFromMenu 52–101 Off 102–152 Fast 153–203 Mid 204–255 Slow

7ch

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Color Add WW	255	
3	Color Add CW	255	
4	Shutter / Strobe	0	0–30 Open 31–100 Strobe · Slow2Fast 0.9–15 Hz 101–130 Opoen 131–200 Random · Slow2Fast 0.9–15 Hz 210–255 Open

7ch (continued)

Ch	Function	Default	DMX values
5	Effect	0	0–10 NoFeature 11–70 AutoProgram1 71–130 AutoProgram2 131–190 AutoProgram3 191–255 AutoProgram4
6	Effect Speed	0	
7	Dimmer Mode	0	0–51 AsFromMenu 52–101 Off 102–152 Fast 153–203 Mid 204–255 Slow