
Sagitter

AuroraBW300

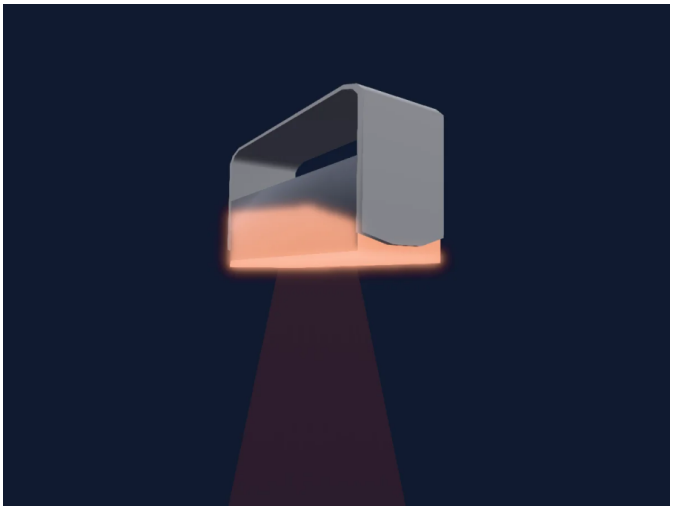

Manufacturer	**Sagitter**
Type	**Effect light**
DMX modes	**5**
DMX footprint	**2, 3, 5, 8, 11 channels**
Beam angle	**25°**
Size (W × H × D)	**400 × 195 × 140 mm**
GDTF fixture type	**6C43C190-84C1-4B29-A312-F4…**

Controls

Extra LED colours · Hue and saturation · RGB colour mixing · Colour wheel · Effect speed · Strobe · Dimmer

Safety-relevant functions

Fixture reset

DMX modes

2 Ch	2 ch
3 Ch	3 ch
5 Ch	5 ch
8 Ch	8 ch
11 Ch	11 ch

2 Ch

2 channels

Ch	Function	Default	DMX values
1	Color Macro1	0	
2	White Macro	0	0–0 No Functions 1–23 2500K 24–47 3000K 48–71 3500K 72–95 4000K 96–119 4500K 120–143 5000K 144–167 6000K 168–191 7000K 192–215 8000K 216–225 9000K 226–255 10000K

3 Ch

3 channels

Ch	Function	Default	DMX values
1	H SBHue	0	
2	H SBSaturation	0	
3	H SBBrightness	0	

5 Ch

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	0	
3	Green	0	
4	Blue	0	
5	White	0	

8 Ch

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–9 Open 10–189 Slow Fast strobe 190–199 Open 2 200–249 Random 250–255 Open
3	Red	0	
4	Green	0	
5	Blue	0	
6	White	0	

8 Ch (continued)

Ch	Function	Default	DMX values
7	Color Effects1	0	0–7 No Functions 8–23 Auto 1 24–39 Auto 2 40–55 Auto 3 56–71 Auto 4 72–87 Auto 5 88–103 Auto 6 104–119 Auto 7 120–129 Auto 8 130–151 Auto 9 152–168 Auto 10 169–183 Auto 11 184–199 Auto 12 200–255 Auto 13
8	Effect Speed	0	

11 Ch

11 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–9 Open 10–189 Slow Fast strobe 190–199 Open 2 200–249 Random 250–255 Open
3	Red	0	
4	Green	0	
5	Blue	0	
6	White	0	
7	Color Macro1	0	
8	White Macro	0	0–0 No Functions 1–23 2500K 24–47 3000K 48–71 3500K 72–95 4000K 96–119 4500K 120–143 5000K 144–167 6000K 168–191 7000K 192–215 8000K 216–225 9000K 226–255 10000K
9	Color Effects1	0	0–7 No Functions 8–23 Auto 1 24–39 Auto 2 40–55 Auto 3 56–71 Auto 4 72–87 Auto 5 88–103 Auto 6 104–119 Auto 7 120–129 Auto 8 130–151 Auto 9 152–168 Auto 10 169–183 Auto 11 184–199 Auto 12 200–255 Auto 13
10	Effect Speed	0	

11 Ch (continued)

Ch	Function	Default	DMX values
11	Fixture Global Reset	0	