
Sagitter

HL F2DLed

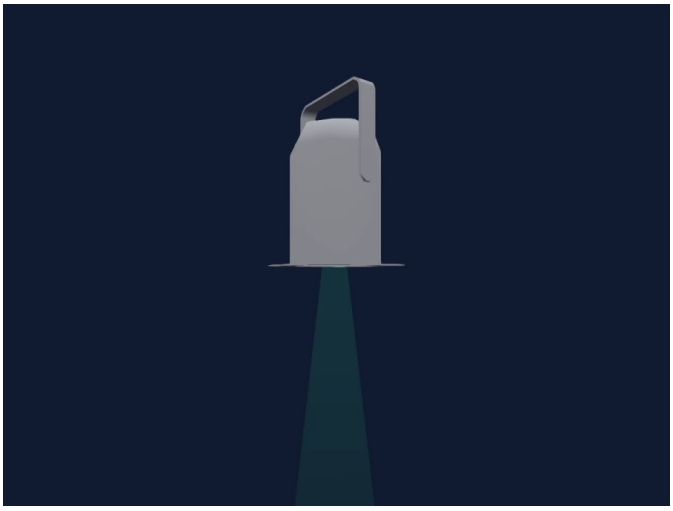

Manufacturer	**Sagitter**
Type	**Spot**
DMX modes	**5**
DMX footprint	**1, 2, 4, 5 channels**
Beam angle	**14°**
Size (W × H × D)	**270 × 250 × 45 mm**
GDTF fixture type	**2CBD0A0A-5412-4B55-BF10-27…**

Controls

Strobe · Dimmer

Safety-relevant functions

Fixture reset · Strobe

DMX modes

Dimmer	1 ch
02Ch	2 ch
16Bit	2 ch
Standard	4 ch
Extend	5 ch

Dimmer

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open

02Ch

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–31 Open 32–63 Closed 64–95 Slow Fast 96–127 Open 128–159 Pulse In slow fast 160–191 Open 192–223 Random Slow Fast 224–255 Open

16Bit

2 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer

Standard

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	0	0–31 Open 32–63 Closed 64–95 Slow Fast 96–127 Open 128–159 Pulse In slow fast 160–191 Open 192–223 Random Slow Fast 224–255 Open
4	Dimmer Mode	0	0–20 Mode Led 21–40 Mode Halogen 41–255 No Functions

Extend

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer

Extend (continued)

Ch	Function	Default	DMX values
3	Shutter / Strobe	0	0–31 Open 32–63 Closed 64–95 Slow Fast 96–127 Open 128–159 Pulse In slow fast 160–191 Open 192–223 Random Slow Fast 224–255 Open
4	Dimmer Mode	0	0–20 Mode Led 21–40 Mode Halogen 41–255 No Functions
5	Fixture Global Reset	0	0–100 No Functions 101–105 900Hz 106–110 1000Hz 111–115 1100Hz 116–120 1200Hz 121–125 1300Hz 126–130 1400Hz 131–135 1500Hz 136–140 2500Hz 141–145 4000Hz 146–150 5000Hz 151–155 10000Hz 156–160 15000Hz 161–165 20000Hz 166–200 No Functions 201–210 Curve Linear 211–220 Curve Square 221–230 Curve Inverse Sqare 231–240 Curve S-Curve 241–255 No Functions