
Sagitter

J-Bar8Bat

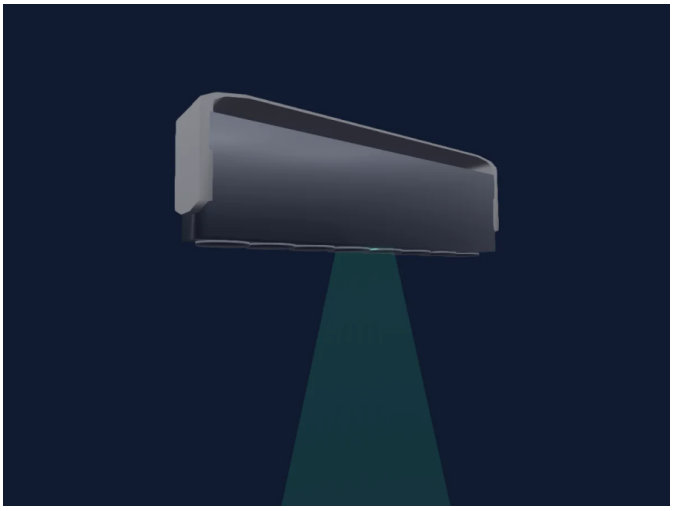

Manufacturer	**Sagitter**
Type	**Effect light**
DMX modes	**6**
DMX footprint	**2, 3, 5, 11, 32, 39 channels**
Heads / cells	**8**
Size (W × H × D)	**520 × 132 × 95 mm**
GDTF fixture type	**6BBC1469-BC6C-48EC-B122-90…**

Controls

Extra LED colours · Hue and saturation · RGB colour mixing · Colour wheel · Effect speed · Strobe · Dimmer · Pixel control

Safety-relevant functions

Fixture reset

DMX modes

2 Ch	2 ch
3 Ch	3 ch
5 Ch	5 ch
11 Ch	11 ch
32 Ch	32 ch
39 Ch	39 ch

2 Ch

2 channels

Ch	Function	Default	DMX values
1	Color Macro1	0	
2	White Macro	0	0–0 No Functions 1–23 2500K 24–47 3000K 48–71 3500K 72–95 4000K 96–119 4500K 120–143 5000K 144–167 6000K 168–191 7000K 192–215 8000K 216–225 9000K 226–255 10000K

3 Ch

3 channels

Ch	Function	Default	DMX values
1	H SBHue	0	
2	H SBSaturation	0	
3	H SBBrightness	0	

5 Ch

5 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Red	0	
3	Green	0	
4	Blue	0	
5	White	0	

11 Ch

11 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–9 Open 10–189 Slow Fast strobe 190–199 Open 2 200–249 Random 250–255 Open
3	Red	0	
4	Green	0	
5	Blue	0	
6	White	0	
7	Color Macro1	0	

11 Ch (continued)

Ch	Function	Default	DMX values
8	White Macro	0	0–0 No Functions 1–23 2500K 24–47 3000K 48–71 3500K 72–95 4000K 96–119 4500K 120–143 5000K 144–167 6000K 168–191 7000K 192–215 8000K 216–225 9000K 226–255 10000K
9	Color Effects1	0	0–7 No Functions 8–23 Auto 1 24–39 Auto 2 40–55 Auto 3 56–71 Auto 4 72–87 Auto 5 88–103 Auto 6 104–119 Auto 7 120–129 Auto 8 130–151 Auto 9 152–168 Auto 10 169–183 Auto 11 184–199 Auto 12 200–255 Auto 13
10	Effect Speed	0	
11	Fixture Global Reset	0	0–63 Curve 1 64–127 Curve 2 128–191 Curve 3 192–255 Curve 4

32 Ch

32 channels

Ch	Function	Default	DMX values
1	Red	0	
2	Green	0	
3	Blue	0	
4	White	0	
5	Red	0	
6	Green	0	
7	Blue	0	
8	White	0	
9	Red	0	
10	Green	0	
11	Blue	0	
12	White	0	
13	Red	0	
14	Green	0	
15	Blue	0	
16	White	0	
17	Red	0	
18	Green	0	

32 Ch (continued)

Ch	Function	Default	DMX values
19	Blue	0	
20	White	0	
21	Red	0	
22	Green	0	
23	Blue	0	
24	White	0	
25	Red	0	
26	Green	0	
27	Blue	0	
28	White	0	
29	Red	0	
30	Green	0	
31	Blue	0	
32	White	0	

39 Ch

39 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Shutter / Strobe	0	0–9 Open 10–189 Slow Fast strobe 190–199 Open 2 200–249 Random 250–255 Open
3	Red	0	
4	Green	0	
5	Blue	0	
6	White	0	
7	Red	0	
8	Green	0	
9	Blue	0	
10	White	0	
11	Red	0	
12	Green	0	
13	Blue	0	
14	White	0	
15	Red	0	
16	Green	0	
17	Blue	0	
18	White	0	
19	Red	0	
20	Green	0	
21	Blue	0	
22	White	0	
23	Red	0	
24	Green	0	
25	Blue	0	

39 Ch (continued)

Ch	Function	Default	DMX values
26	White	0	
27	Red	0	
28	Green	0	
29	Blue	0	
30	White	0	
31	Red	0	
32	Green	0	
33	Blue	0	
34	White	0	
35	Color Macro1	0	
36	White Macro	0	0–0 No Functions 1–23 2500K 24–47 3000K 48–71 3500K 72–95 4000K 96–119 4500K 120–143 5000K 144–167 6000K 168–191 7000K 192–215 8000K 216–225 9000K 226–255 10000K
37	Color Effects1	0	0–7 No Functions 8–23 Auto 1 24–39 Auto 2 40–55 Auto 3 56–71 Auto 4 72–87 Auto 5 88–103 Auto 6 104–119 Auto 7 120–129 Auto 8 130–151 Auto 9 152–168 Auto 10 169–183 Auto 11 184–199 Auto 12 200–255 Auto 13
38	Effect Speed	0	
39	Dimmer Curve	0	0–63 Curve 1 64–127 Curve 2 128–191 Curve 3 192–255 Curve 4