
SHEHDS

Led Spot 100W

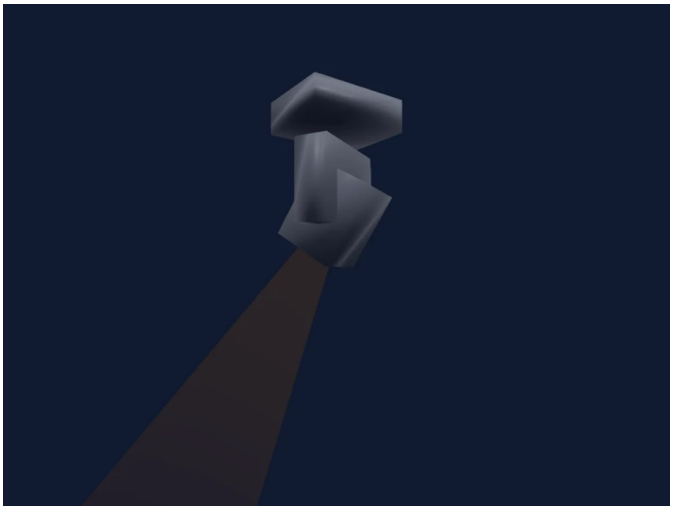

Manufacturer	**SHEHDS**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**14 channels**
Beam angle	**25°**
Pan range	**540°**
Tilt range	**220°**
Size (W × H × D)	**150 × 200 × 150 mm**
GDTF fixture type	**DF64416C-4D60-4841-B6AF-BC…**

Controls

Focus · Prism · Colour wheel · Dimmer · Movement speed · Gobos · Gobo rotation

Safety-relevant functions

Fixture reset · Strobe

DMX modes

Default	14 ch

Default

14 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	0	0–251 Shutter1Strobe 2 252–255 Shutter1 2
3	Pan	128	
4	Tilt	128	
5	Position MSpeed	0	
6	Color Wheel	0	0–4 White (wheel slot 1) 5–9 Red (wheel slot 2) 10–14 Green (wheel slot 3) 15–19 Blue (wheel slot 4) 20–24 Yellow (wheel slot 5) 25–29 Magenta (wheel slot 6) 30–34 Cyan (wheel slot 7) 35–255 Green 1 (wheel slot 8)
7	Gobo	0	0–9 Open (wheel slot 1) 10–19 SixTriangles (wheel slot 2) 20–29 Sun (wheel slot 3) 30–39 SquaresBar (wheel slot 4) 40–49 GridSquares (wheel slot 5) 50–59 Rose (wheel slot 6) 60–69 SquaresBarLarge (wheel slot 7) 70–79 RandomSquares (wheel slot 8) 80–129 Gobo1WheelSpin 2 130–134 Gobo1WheelSpin 3 135–220 Gobo1WheelSpin 4 221–255 Gobo1WheelShake 5
8	Gobo 2	0	0–9 Open (wheel slot 1) 10–19 PurpleDots (wheel slot 2) 20–29 BlueBacteria (wheel slot 3) 30–39 FourDots (wheel slot 4) 40–49 Triangle (wheel slot 5) 50–59 Swirl (wheel slot 6) 60–69 Flower (wheel slot 7) 70–129 Gobo2WheelSpin 2 130–134 Gobo2WheelSpin 3 135–225 Gobo2WheelSpin 4 226–255 Gobo2WheelShake 5
9	Gobo Rotation 2	0	0–63 Gobo2Pos 1 64–126 Gobo2PosRotate 2 127–190 Gobo2PosRotate 3 191–255 Gobo2PosRotate 4
10	Prism	0	0–9 Open (wheel slot 1) 10–14 Prism (wheel slot 2) 15–255 Prism1PosRotate 2
11	Focus	0	
12	Pan Fine	0	Fine byte of Pan
13	Tilt Fine	0	Fine byte of Tilt
14	Fixture Global Reset	0	