
SHEHDS

Shehds 7x40 mini wash

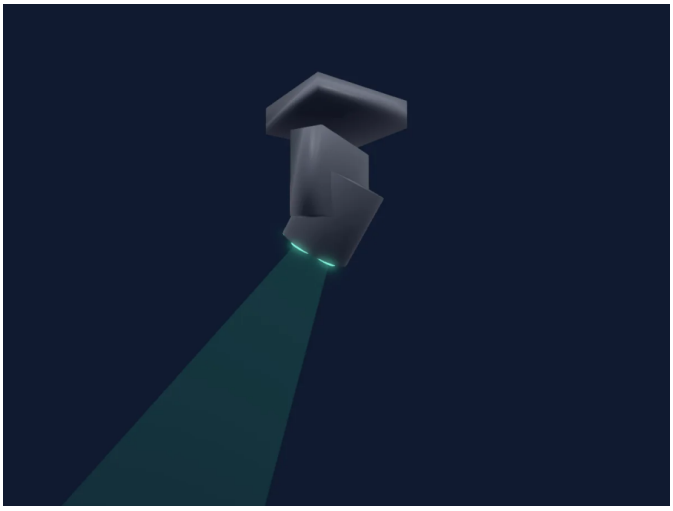

Manufacturer	**SHEHDS**
Type	**Moving head**
DMX modes	**2**
DMX footprint	**11, 17 channels**
Beam angle	**8-50°**
Pan range	**540°**
Tilt range	**270°**
Size (W × H × D)	**200 × 210 × 200 mm**
GDTF fixture type	**62E622CC-004F-4C6F-B333-AA…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Effect speed · Strobe · Dimmer · Pan and tilt · Movement speed

Safety-relevant functions

Fixture reset · Built-in effect programmes

DMX modes

STD 11 CH	11 ch
STD 17 CH	17 ch

STD 11 CH

11 channels

Ch	Function	Default	DMX values
1	Pan	127	
2	Pan Fine	255	Fine byte of Pan
3	Tilt	127	
4	Tilt Fine	255	Fine byte of Tilt
5	Position MSpeed	0	
6	Dimmer	0	
7	Shutter / Strobe	255	0–3 Shutter closed 4–103 Strobe from slow/fast 104–107 Shutter open 108–207 Pulse effect slow/fast 208–212 Shutter open 213–251 Random strobe slow/fast 252–255 Shutter open
8	H SBHue	0	
9	H SBSaturation	0	
10	Zoom	127	0–126 Narrow 127–254 Mid 255–255 Wide
11	Beam Reset	0	0–239 No function 240–244 Motor reset 245–249 Sound 250–255 Auto Mode

STD 17 CH

17 channels

Ch	Function	Default	DMX values
1	Pan	127	
2	Pan Fine	255	Fine byte of Pan
3	Tilt	127	
4	Tilt Fine	255	Fine byte of Tilt
5	Position MSpeed	0	
6	Dimmer	0	
7	Shutter / Strobe	255	0–3 Shutter closed 4–103 Strobe from slow/fast 104–107 Shutter open 108–207 Pulse effect slow/fast 208–212 Shutter open 213–251 Random strobe slow/fast 252–255 Shutter open
8	Red	255	
9	Green	255	
10	Blue	255	
11	White	255	
12	C TO	255	
13	Color Macro1	0	
14	Zoom	127	0–126 Narrow 127–254 Mid 255–255 Wide

STD 17 CH (continued)

Ch	Function	Default	DMX values
15	Effect	0	0–0 Off 1–25 Wave 26–51 Dream 52–77 Colors Chase 78–103 Red Wave 104–129 Green Wave 130–155 Blue Wave 156–181 Yellow Wave 182–207 Magenta Wave 208–233 Cyan Wave 234–255 White Wave
16	Effect Speed	0	
17	Beam Reset	0	0–239 No function 240–244 Motor reset 245–249 Sound 250–255 Auto Mode