
ShowPro

Apollo

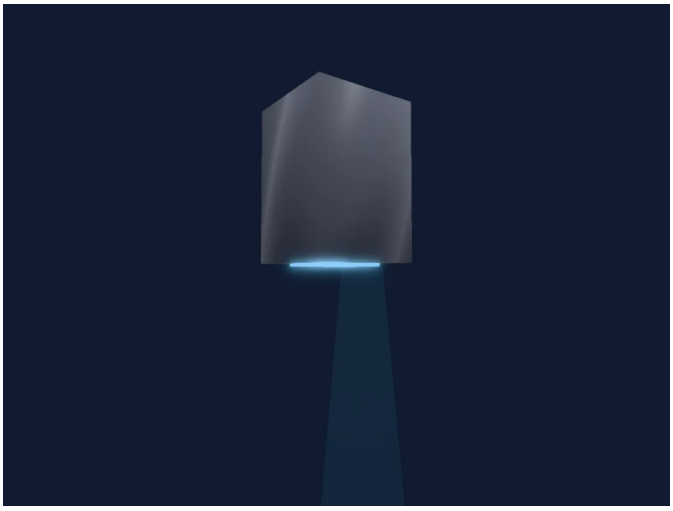

Manufacturer	**ShowPro**
Type	**Effect light**
DMX modes	**4**
DMX footprint	**3, 4, 6, 10 channels**
Beam angle	**11°**
Size (W × H × D)	**138 × 202 × 138 mm**
GDTF fixture type	**7E7AE967-A417-424A-A30A-24…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Effect speed · Strobe · Dimmer

Safety-relevant functions

Strobe · Built-in effect programmes

DMX modes

3 Channel	3 ch
4 Channel Mode	4 ch
6 Channel Mode	6 ch
10 Channel Mode	10 ch

3 Channel

3 channels

Ch	Function	Default	DMX values
1	H SBHue	0	
2	H SBSaturation	0	
3	Dimmer	0	0–254 Closed 255–255 Open

4 Channel Mode

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	

6 Channel Mode

6 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	0	
6	Shutter / Strobe	0	0–10 Open 11–255 Strobe

10 Channel Mode

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	0	
6	Shutter / Strobe	0	0–10 Open 11–255 Strobe
7	Color Macro1	0	0–10 No Function 11–170 RGB Macro 171–200 All LEDs full 201–205 White Balance Preset 1 206–210 White Balance Preset 2 211–215 White Balance Preset 3 216–220 White Balance Preset 4 221–225 White Balance Preset 5 226–230 White Balance Preset 6 231–235 White Balance Preset 7 236–240 White Balance Preset 8 241–245 White Balance Preset 9 246–250 White Balance Preset 10 251–255 White Balance Preset 11

10 Channel Mode (continued)

Ch	Function	Default	DMX values
8	Effect	0	0–51 No Function 52–101 Auto Program 1 102–152 Auto Program 2 153–203 Auto Program 3 204–254 Auto Program 4 255–255 Auto Program 5
9	Effect Speed	0	
10	Dimmer Mode	0	0–51 Set from Menu 52–101 Dim Curve Off 102–152 Dim Curve 1 153–203 Dim Curve 2 204–255 Dim Curve 3