
Showtec

Infnity TF-300 Fresnel

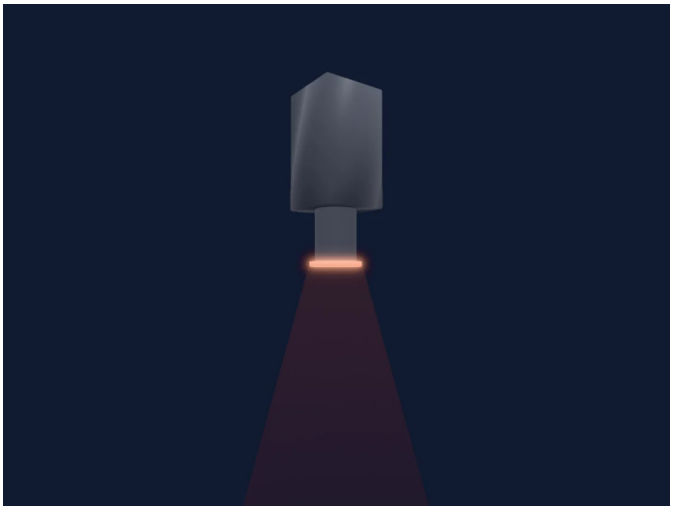

Manufacturer	**Showtec**
Type	**Spot**
DMX modes	**3**
DMX footprint	**1, 3, 4 channels**
Beam angle	**35°**
Size (W × H × D)	**250 × 450 × 250 mm**
GDTF fixture type	**2541092F-3048-4867-BA22-147…**

Controls

Zoom · Strobe · Dimmer

Safety-relevant functions

Fixture reset · Service functions · Strobe

DMX modes

1 Channel (Dimmer)	1 ch
3 Channel (Basic)	3 ch
5 Channel (Pro)	4 ch

1 Channel (Dimmer)

1 channel

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open

3 Channel (Basic)

3 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closes 255–255 Open
2	Shutter / Strobe	250	0–5 Closed 6–249 Strobe - low to high 250–255 Open
3	Zoom	127	

5 Channel (Pro)

4 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closes 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	250	0–5 Closed 6–249 Strobe - low to high 250–255 Open
4	Control1	8	0–7 No Function 8–15 Linear 16–23 Gamma 2-0 24–31 Gamma 2-2 32–39 S-Curve 40–47 Auto 48–55 Slow 56–63 Medium 64–71 Fast 72–103 No Function 104–111 1-1kHz 112–119 1-2kHz 120–127 1-3kHz 128–135 1-4kHz 136–143 1-5kHz 144–151 1-6kHz 152–159 Calibration disabled 160–167 Calibration enabled 168–175 Silent 176–183 Auto 184–191 Full 192–199 Auto OFF 200–207 ON 208–223 No Function 224–231 Reset Motor 232–249 No Function 250–250 Reset All 251–255 No Function