
Showtec

light bar 8

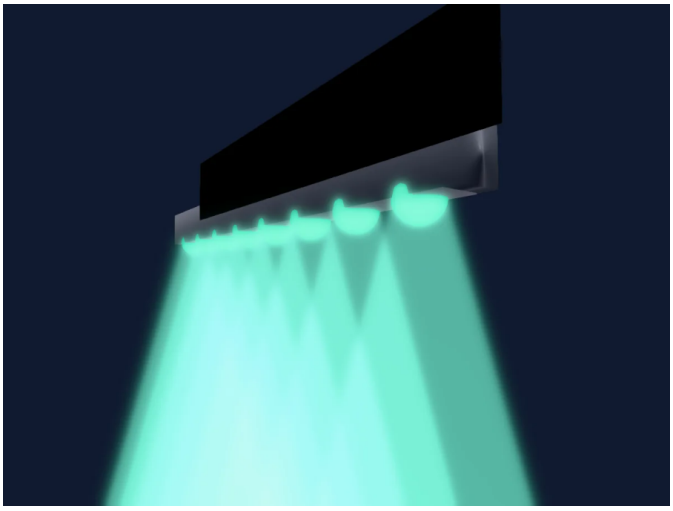

Manufacturer	**Showtec**
Type	**LED bar**
DMX modes	**6**
DMX footprint	**2, 3, 4, 7, 14, 26 channels**
Beam angle	**30°**
Size (W × H × D)	**1070 × 88 × 65 mm**
GDTF fixture type	**C7535792-4DF7-453E-8D4B-C4…**

Controls

RGB colour mixing · Colour wheel · Strobe · Dimmer

Safety-relevant functions

Strobe

DMX modes

d-P5	2 ch
d-P1	3 ch
d-P2	4 ch
d-P6	7 ch
d-P3	14 ch
d-P4	26 ch

d-P5

2 channels

Ch	Function	Default	DMX values
1	Color Macro1	0	0–7 Off 8–15 Red 16–23 Yellow 24–31 Green 32–39 Cyan 40–47 Blue 48–55 Purple 56–63 White 64–71 Macro 1 72–79 Macro 2 80–87 Macro 3 88–95 Macro 4 96–103 Macro 5 104–111 Macro 6 112–119 Macro 7 120–127 Macro 8 128–135 Macro 9 136–143 Macro 10 144–151 Macro 11 152–159 Macro 12 160–167 Macro 13 168–175 Macro 14 176–183 Macro 15 184–191 Macro 16 192–199 Macro 17 200–207 Macro 18 208–215 Macro 19 216–223 Macro 20 224–231 Macro 21 232–255 Sound to Light
2	Color Macro1Rate	0	0–126 Slow 127–254 Medium 255–255 Fast

d-P1

3 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	

d-P2

4 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Dimmer	0	0–254 Closed 255–255 Open

d-P6

7 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	

d-P6 (continued)

Ch	Function	Default	DMX values
3	Blue	255	
4	Color Macro1	0	0–7 Off 8–15 Red 16–23 Yellow 24–31 Green 32–39 Cyan 40–47 Blue 48–55 Purple 56–63 White 64–71 Macro 1 72–79 Macro 2 80–87 Macro 3 88–95 Macro 4 96–103 Macro 5 104–111 Macro 6 112–119 Macro 7 120–127 Macro 8 128–135 Macro 9 136–143 Macro 10 144–151 Macro 11 152–159 Macro 12 160–167 Macro 13 168–175 Macro 14 176–183 Macro 15 184–191 Macro 16 192–199 Macro 17 200–207 Macro 18 208–215 Macro 19 216–223 Macro 20 224–231 Macro 21 232–255 Sound to Light
5	Color Macro1Rate	0	0–126 Slow 127–254 Medium 255–255 Fast
6	Shutter / Strobe	0	0–126 Open 127–254 Strobe Medium 255–255 Strobe Fast
7	Dimmer	0	0–254 Closed 255–255 Open

d-P3

14 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	

d-P3 (continued)

Ch	Function	Default	DMX values
13	Shutter / Strobe	0	0–10 Open 11–126 Strobe Slow 127–254 Strobe Medium 255–255 Strobe Fast
14	Dimmer	255	0–254 Closed 255–255 Open

d-P4

26 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	Reserved 4	0	
5	Reserved 5	0	
6	Reserved 6	0	
7	Reserved 7	0	
8	Reserved 8	0	
9	Reserved 9	0	
10	Reserved 10	0	
11	Reserved 11	0	
12	Reserved 12	0	
13	Reserved 13	0	
14	Reserved 14	0	
15	Reserved 15	0	
16	Reserved 16	0	
17	Reserved 17	0	
18	Reserved 18	0	
19	Reserved 19	0	
20	Reserved 20	0	
21	Reserved 21	0	
22	Reserved 22	0	
23	Reserved 23	0	
24	Reserved 24	0	
25	Shutter / Strobe	0	0–10 Open 11–126 Strobe Slow 127–254 Strobe Medium 255–255 Strobe Fast
26	Dimmer	255	0–254 Closed 255–255 Open