
Showtec

Shark Zoom Wash

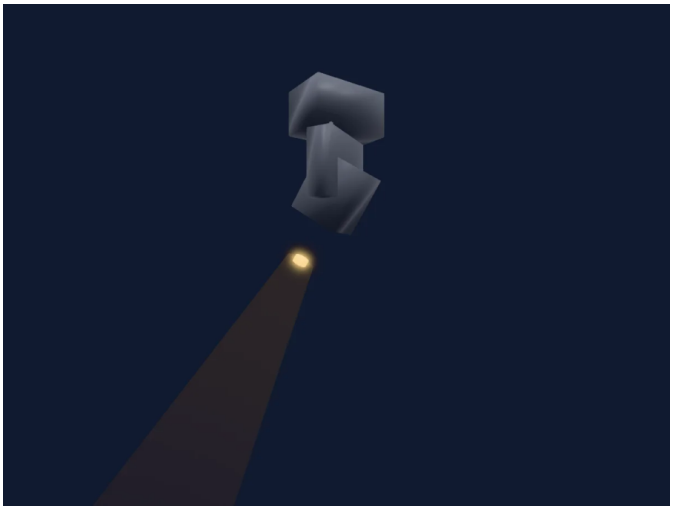

Manufacturer	**Showtec**
Type	**Moving head**
DMX modes	**2**
DMX footprint	**8, 15 channels**
Beam angle	**6-36°**
Pan range	**540°**
Tilt range	**220°**
Size (W × H × D)	**130 × 170 × 135 mm**
GDTF fixture type	**3D92A75D-FD74-418C-A6F9-4E…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer · Pan and tilt · Movement speed

Safety-relevant functions

Fixture reset · Strobe · Built-in effect programmes

DMX modes

8CH	8 ch
15CH	15 ch

8CH

8 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Tilt	128	
3	Position MSpeed	0	0–254 Max Speed 255–255 Min Speed
4	Dimmer	0	0–254 Open 255–255 Closed
5	Shutter / Strobe	0	0–9 Open 10–249 Min Strobe 250–250 Max Strobe 251–255 Open
6	Color Effects1	141	0–10 No Function 11–20 Red 21–30 Green 31–40 Blue 41–50 White 51–60 Red/White 61–70 Green/White 71–80 Blue/White 81–90 Red/Green 91–100 Green/Blue 101–110 Red/Blue 111–120 Red/Green/White 121–130 Green/Blue/White 131–140 Red/Blue/White 141–150 Red/Green/Blue/White 151–200 Col Step 201–255 Col Fade
7	Zoom	128	0–254 Min Zoom 255–255 Max Zoom
8	Effect	0	0–10 No Function 11–20 Program 1 21–30 Program 2 31–40 Program 3 41–50 Program 4 51–60 Program 5 61–70 Program 6 71–80 Program 7 81–90 Program 8 91–230 Sound Control 231–240 Reset 241–255 No Function

15CH

15 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	128	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	128	Fine byte of Tilt
5	Position MSpeed	0	0–254 Max Speed 255–255 Min Speed
6	Dimmer	0	0–254 Open 255–255 Closed

15CH (continued)

Ch	Function	Default	DMX values
7	Shutter / Strobe	0	0–9 Open 10–249 Min Strobe 250–250 Max Strobe 251–255 Open
8	Red	255	
9	Green	255	
10	Blue	255	
11	White	255	
12	C TC	0	0–254 Min CTC 255–255 Max CTC
13	Color Effects1	0	0–10 No Function 11–20 Red 21–30 Green 31–40 Blue 41–50 White 51–60 Red/White 61–70 Green/White 71–80 Blue/White 81–90 Red/Green 91–100 Green/Blue 101–110 Red/Blue 111–120 Red/Green/White 121–130 Green/Blue/White 131–140 Red/Blue/White 141–150 Red/Green/Blue/White 151–200 Col Step 201–255 Col Fade
14	Zoom	128	0–254 Min Zoom 255–255 Max Zoom
15	Effect	0	0–10 No Function 11–20 Program 1 21–30 Program 2 31–40 Program 3 41–50 Program 4 51–60 Program 5 61–70 Program 6 71–80 Program 7 81–90 Program 8 91–230 Sound Control 231–240 Reset 241–255 No Function