
Silver Star

PixPar 2

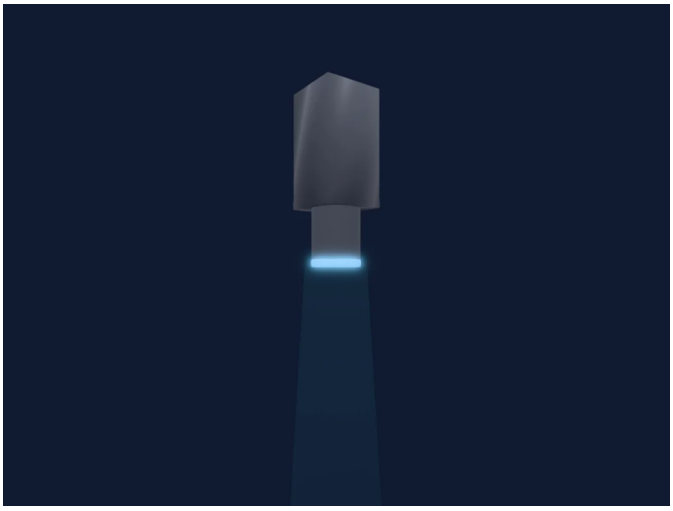

Manufacturer	**Silver Star**
Type	**Effect light**
DMX modes	**4**
DMX footprint	**9, 12, 17 channels**
Beam angle	**3-18°**
Size (W × H × D)	**174 × 335 × 174 mm**
GDTF fixture type	**51A0B21F-1281-4652-A634-6C…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Effect speed · Strobe · Dimmer

Safety-relevant functions

Fixture reset · Built-in effect programmes

DMX modes

HSIC	9 ch
SSP	9 ch
Tour	12 ch
TR16	17 ch

HSIC

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	H SBHue	0	
3	H SBHue Fine	0	Fine byte of H SBHue
4	H SBSaturation	0	
5	C TC	0	0–10 No Function 11–30 2700K 31–50 3000K 51–70 3200K 71–90 3500K 91–110 4000K 111–130 4200K 131–150 4500K 151–170 5600K 171–190 6000K 191–210 6500K 211–230 7200K 231–255 8000K
6	Shutter / Strobe	0	0–9 Shutter 10–99 Strobe 100–109 Open 110–179 Shutter1StrobePulse 4 · Lightning 1–15 Hz 180–189 Open 190–255 Random
7	Zoom	0	0–127 Narrow 128–254 Mid 255–255 Wide
8	Control1	0	0–200 No Function 201–220 Zoom Reset 221–255 No Function
9	Dimmer Mode	0	0–9 Menu Set 10–29 Off 30–69 Dim 1 70–129 Dim 2 130–189 Dim 3 190–255 Dim 4

SSP

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	0	
6	Shutter / Strobe	0	0–9 Shutter 10–99 Strobe 100–109 Open 110–179 Shutter1StrobePulse 4 · Lightning 1–15 Hz 180–189 Open 190–255 Random
7	Zoom	0	0–127 Narrow 128–254 Mid 255–255 Wide

SSP (continued)

Ch	Function	Default	DMX values
8	Control1	0	0–200 No Function 201–220 Zoom Reset 221–255 No Function
9	Dimmer Mode	0	0–9 Menu Set 10–29 Off 30–69 Dim 1 70–129 Dim 2 130–189 Dim 3 190–255 Dim 4

Tour

12 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	0	
6	Color Macro1	0	0–21 No Function 22–170 RGB Macro 171–195 All LEDs On 196–200 2700K 201–205 3000K 206–210 3200K 211–215 3500K 216–220 4000K 221–225 4200K 226–230 4500K 231–235 5600K 236–240 6000K 241–245 6500K 246–250 7200K 251–255 8000K
7	Shutter / Strobe	0	0–9 Shutter 10–99 Strobe 100–109 Open 110–179 Shutter1StrobePulse 4 · Lightning 1–15 Hz 180–189 Open 190–255 Random

Tour (continued)

Ch	Function	Default	DMX values
8	Effect	0	0–40 No Function 41–50 Auto 1 51–60 Auto 2 61–70 Auto 3 71–80 Auto 4 81–90 Auto 5 91–100 Auto 6 101–110 Auto 7 111–120 Auto 8 121–130 Auto 9 131–140 Auto 10 141–150 Program 1 151–160 Program 2 161–170 Program 3 171–180 Program 4 181–190 Program 5 191–200 Program 6 201–210 Program 7 211–220 Program 8 221–230 Program 9 231–255 Program 10
9	Effect Speed	0	
10	Zoom	0	0–127 Narrow 128–254 Mid 255–255 Wide
11	Control1	0	0–200 No Function 201–220 Zoom Reset 221–255 No Function
12	Dimmer Mode	0	0–9 Menu Set 10–29 Off 30–69 Dim 1 70–129 Dim 2 130–189 Dim 3 190–255 Dim 4

TR16

17 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Red	255	
4	Red Fine	255	Fine byte of Red
5	Green	255	
6	Green Fine	255	Fine byte of Green
7	Blue	255	
8	Blue Fine	255	Fine byte of Blue
9	White	0	
10	White Fine	0	Fine byte of White

TR16 (continued)

Ch	Function	Default	DMX values
11	Color Macro1	0	0–21 No Function 22–170 RGB Macro 171–195 All LEDs On 196–200 2700K 201–205 3000K 206–210 3200K 211–215 3500K 216–220 4000K 221–225 4200K 226–230 4500K 231–235 5600K 236–240 6000K 241–245 6500K 246–250 7200K 251–255 8000K
12	Shutter / Strobe	0	0–9 Shutter 10–99 Strobe 100–109 Open 110–179 Shutter1StrobePulse 4 · Lightning 1–15 Hz 180–189 Open 190–255 Random
13	Effect	0	0–40 No Function 41–50 Auto 1 51–60 Auto 2 61–70 Auto 3 71–80 Auto 4 81–90 Auto 5 91–100 Auto 6 101–110 Auto 7 111–120 Auto 8 121–130 Auto 9 131–140 Auto 10 141–150 Program 1 151–160 Program 2 161–170 Program 3 171–180 Program 4 181–190 Program 5 191–200 Program 6 201–210 Program 7 211–220 Program 8 221–230 Program 9 231–255 Program 10
14	Effect Speed	0	
15	Zoom	0	0–127 Narrow 128–254 Mid 255–255 Wide
16	Control1	0	0–200 No Function 201–220 Zoom Reset 221–255 No Function
17	Dimmer Mode	0	0–9 Menu Set 10–29 Off 30–69 Dim 1 70–129 Dim 2 130–189 Dim 3 190–255 Dim 4