
Stage4

UNITY 7 FAU

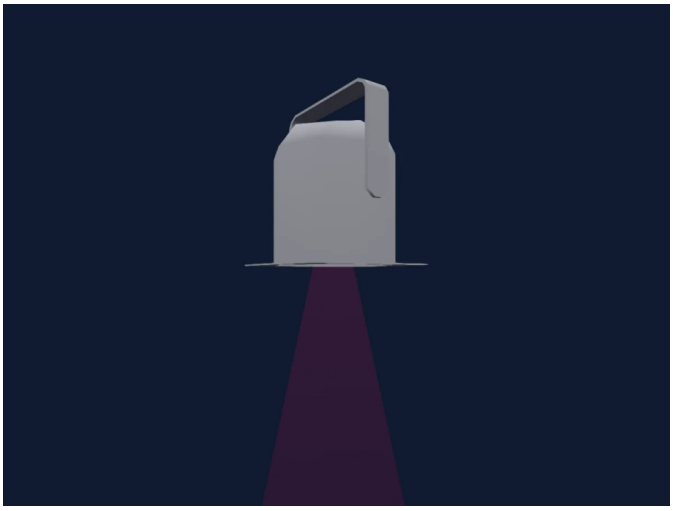

Manufacturer	**Stage4**
Type	**Effect light**
DMX modes	**4**
DMX footprint	**7, 9, 15, 22 channels**
Beam angle	**25°**
Size (W × H × D)	**250 × 195 × 45 mm**
GDTF fixture type	**4EF74DEE-766C-46C4-ACE2-A3…**

Controls

Extra LED colours · RGB colour mixing · Colour temperature · Colour wheel · Effect speed · Dimmer

Safety-relevant functions

Built-in effect programmes

DMX modes

7ch	7 ch
9ch	9 ch
15ch	15 ch
22ch	22 ch

7ch

7 channels

Ch	Function	Default	DMX values
1	Intensity MSpeed	0	0–49 No Func 50–89 Speed 1 90–129 Speed 2 130–169 Speed 3 170–209 Speed 4 210–255 Speed 5
2	Red	255	
3	Green	255	
4	Blue	255	
5	White	0	
6	Color Add RY	0	
7	UV	0	

9ch

9 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Intensity MSpeed	0	0–49 No Func 50–89 Speed 1 90–129 Speed 2 130–169 Speed 3 170–209 Speed 4 210–255 Speed 5
3	Red	255	
4	Green	255	
5	Blue	255	
6	White	0	
7	Color Add RY	0	
8	UV	0	
9	Strobe Mode Strobe	0	

15ch

15 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Intensity MSpeed	0	0–49 No Func 50–89 Speed 1 90–129 Speed 2 130–169 Speed 3 170–209 Speed 4 210–255 Speed 5
3	Red	255	
4	Green	255	
5	Blue	255	
6	White	0	
7	Color Add RY	0	
8	UV	0	
9	Strobe Mode Strobe	0	

15ch (continued)

Ch	Function	Default	DMX values
10	Color Wheel	0	0–12 No Func (wheel slot 1) 13–16 Color1 (wheel slot 2) 17–20 Color2 (wheel slot 3) 21–24 Color3 25–28 Color4 29–32 Color5 33–36 Color6 37–40 Color7 41–44 Color8 45–48 Color9 49–52 Color10 53–56 Color11 57–60 Color12 61–64 Color13 65–68 Color14 69–72 Color15 73–76 Color16 77–80 Color17 81–84 Color18 85–88 Color19 89–92 Color20 93–96 Color21 97–100 Color22 101–104 Color23 105–108 Color24 109–112 Color25 113–116 Color26 117–120 Color27 121–124 Color28 125–128 Color29 129–132 Color30 133–136 Color31 137–140 Color32 141–144 Color33 145–148 Color34 149–152 Color35 153–156 Color36 157–160 Color37 161–164 Color38 165–168 Color39 169–172 Color40 173–176 Color41 177–180 Color42 181–184 Color43 185–188 Color44 189–192 Color45 193–196 Color46 197–200 Color47 201–204 Color48 205–208 Color49 209–255 Color50
11	C TO	0	0–12 No Func 13–38 3200K 39–64 3500K 65–90 4000K 91–116 4500K 117–142 5000K 143–168 5500K 169–194 6000K 195–220 7000K 221–255 8000K

15ch (continued)

Ch	Function	Default	DMX values
12	Effect	0	0–20 No Func 21–30 Auto1 31–40 Auto2 41–50 Auto3 51–60 Auto4 61–70 Auto5 71–80 Auto6 81–90 Auto7 91–100 Auto8 101–110 Auto9 111–120 Auto10 121–130 Sound1 131–140 Sound2 141–150 Sound3 151–160 Sound4 161–170 Sound5 171–180 Sound6 181–190 Sound7 191–200 Sound8 201–210 Sound9 211–255 Sound10
13	Effect Speed	0	0–254 Min Speed 255–255 Max Speed
14	Dimmer Curve	0	0–49 No Func 50–99 Curve 1 100–149 Curve 2 150–199 Curve 3 200–255 Curve 4
15	Function	0	0–24 No Func 25–49 Fan Auto 50–74 Fan Silent 75–99 No Func 100–137 600Hz 138–175 1200Hz 176–213 2400Hz 214–255 4800Hz

22ch

22 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Intensity MSpeed	0	0–49 No Func 50–89 Speed 1 90–129 Speed 2 130–169 Speed 3 170–209 Speed 4 210–255 Speed 5
4	Red	255	
5	Red Fine	255	Fine byte of Red
6	Green	255	
7	Green Fine	255	Fine byte of Green
8	Blue	255	
9	Blue Fine	255	Fine byte of Blue
10	White	0	

22ch (continued)

Ch	Function	Default	DMX values
11	White Fine	0	Fine byte of White
12	Color Add RY	0	
13	Color Add RY Fine	0	Fine byte of Color Add RY
14	UV	0	
15	UV Fine	0	Fine byte of UV
16	Strobe Mode Strobe	0	
17	Color Wheel	0	0–12 No Func (wheel slot 1) 13–16 Color1 (wheel slot 2) 17–20 Color2 (wheel slot 3) 21–24 Color3 25–28 Color4 29–32 Color5 33–36 Color6 37–40 Color7 41–44 Color8 45–48 Color9 49–52 Color10 53–56 Color11 57–60 Color12 61–64 Color13 65–68 Color14 69–72 Color15 73–76 Color16 77–80 Color17 81–84 Color18 85–88 Color19 89–92 Color20 93–96 Color21 97–100 Color22 101–104 Color23 105–108 Color24 109–112 Color25 113–116 Color26 117–120 Color27 121–124 Color28 125–128 Color29 129–132 Color30 133–136 Color31 137–140 Color32 141–144 Color33 145–148 Color34 149–152 Color35 153–156 Color36 157–160 Color37 161–164 Color38 165–168 Color39 169–172 Color40 173–176 Color41 177–180 Color42 181–184 Color43 185–188 Color44 189–192 Color45 193–196 Color46 197–200 Color47 201–204 Color48 205–208 Color49 209–255 Color50

22ch (continued)

Ch	Function	Default	DMX values
18	C TO	0	0–12 No Func 13–38 3200K 39–64 3500K 65–90 4000K 91–116 4500K 117–142 5000K 143–168 5500K 169–194 6000K 195–220 7000K 221–255 8000K
19	Effect	0	0–20 No Func 21–30 Auto1 31–40 Auto2 41–50 Auto3 51–60 Auto4 61–70 Auto5 71–80 Auto6 81–90 Auto7 91–100 Auto8 101–110 Auto9 111–120 Auto10 121–130 Sound1 131–140 Sound2 141–150 Sound3 151–160 Sound4 161–170 Sound5 171–180 Sound6 181–190 Sound7 191–200 Sound8 201–210 Sound9 211–255 Sound10
20	Effect Speed	0	0–254 Min Speed 255–255 Max Speed
21	Dimmer Curve	0	0–49 No Func 50–99 Curve 1 100–149 Curve 2 150–199 Curve 3 200–255 Curve 4
22	Function	0	0–24 No Func 25–49 Fan Auto 50–74 Fan Silent 75–99 No Func 100–137 600Hz 138–175 1200Hz 176–213 2400Hz 214–255 4800Hz