
Stage4

W-STROBE

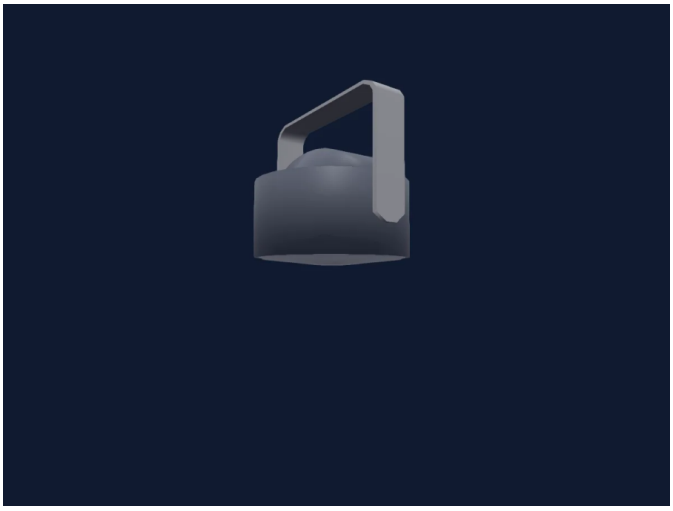

Manufacturer	**Stage4**
Type	**Strobe**
DMX modes	**4**
DMX footprint	**7, 11, 16, 20 channels**
Beam angle	**114°**
Size (W × H × D)	**240 × 170 × 45 mm**
GDTF fixture type	**5E83575D-9D7C-4412-B440-C9…**

Controls

Extra LED colours · Colour temperature · Colour wheel · Strobe · Dimmer

DMX modes

7 DMX	7 ch
11 DMX	11 ch
16 DMX Pix	16 ch
20 DMX Pix	20 ch

7 DMX

7 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	50	0–31 Open 32–63 CLose 64–94 Strobe Min 95–95 Strobe Max 96–127 Open 128–142 Pulse Open Min 143–143 pulse Open Max 144–158 Pulse Close Max 159–159 Pulse Close Min 160–191 Open 192–222 Random Min 223–223 Random Max 224–255 Open
3	Color Add WW	0	
4	Color Add CW	0	
5	C TO	0	0–15 No Func 16–254 2700K 255–255 8000K
6	Color Macro1	0	0–15 No Func 16–27 Macro 1 28–39 Macro 2 40–51 Macro 3 52–63 Macro 4 64–75 Macro 5 76–87 Macro 6 88–99 Macro 7 100–111 Macro 8 112–123 Macro 9 124–135 Macro 10 136–147 Macro 11 148–159 Macro 12 160–171 Macro 13 172–183 Macro 14 184–195 Macro 15 196–207 Sound 1 208–219 Sound 2 220–231 Sound 3 232–243 Sound 4 244–255 Sound 5
7	Color Macro1Rate	0	0–19 Min 20–20 Fan Auto 21–38 Fan S>F 39–39 Fan Min 40–254 No Func 255–255 Max

11 DMX

11 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer

11 DMX (continued)

Ch	Function	Default	DMX values
3	Shutter / Strobe	50	0–31 Close 32–63 Open 64–94 Strobe Min 95–95 Strobe Max 96–127 Open 128–142 Pulse Open Min 143–143 pulse Open Max 144–158 Pulse Close Max 159–159 Pulse Close Min 160–191 Open 192–222 Random Min 223–223 Random Max 224–255 Open
4	Color Add WW	0	
5	Color Add WW Fine	0	Fine byte of Color Add WW
6	Color Add CW	0	
7	Color Add CW Fine	0	Fine byte of Color Add CW
8	C TO	0	0–15 No Func 16–254 2700K 255–255 8000K
9	Color Macro1	0	0–15 No Func 16–27 Macro 1 28–39 Macro 2 40–51 Macro 3 52–63 Macro 4 64–75 Macro 5 76–87 Macro 6 88–99 Macro 7 100–111 Macro 8 112–123 Macro 9 124–135 Macro 10 136–147 Macro 11 148–159 Macro 12 160–171 Macro 13 172–183 Macro 14 184–195 Macro 15 196–207 Sound 1 208–219 Sound 2 220–231 Sound 3 232–243 Sound 4 244–255 Sound 5
10	Color Macro1Rate	0	0–19 Min 20–20 Fan Auto 21–38 Fan S>F 39–39 Fan Min 40–254 No Func 255–255 Max
11	Dimmer Curve	0	0–19 No Func 20–39 Linear 40–59 S-Curve 60–79 Square 80–99 Inv Square 100–255 No Func

16 DMX Pix

16 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Shutter / Strobe	50	0–31 Close 32–63 Open 64–94 Strobe Min 95–95 Strobe Max 96–127 Open 128–142 Pulse Open Min 143–143 pulse Open Max 144–158 Pulse Close Max 159–159 Pulse Close Min 160–191 Open 192–222 Random Min 223–223 Random Max 224–255 Open
3	Color Add WW	0	
4	Color Add CW	0	
5	C TO	0	0–15 No Func 16–254 2700K 255–255 8000K
6	Color Macro1	0	0–15 No Func 16–27 Macro 1 28–39 Macro 2 40–51 Macro 3 52–63 Macro 4 64–75 Macro 5 76–87 Macro 6 88–99 Macro 7 100–111 Macro 8 112–123 Macro 9 124–135 Macro 10 136–147 Macro 11 148–159 Macro 12 160–171 Macro 13 172–183 Macro 14 184–195 Macro 15 196–207 Sound 1 208–219 Sound 2 220–231 Sound 3 232–243 Sound 4 244–255 Sound 5
7	Color Macro1Rate	0	0–19 Min 20–20 Fan Auto 21–38 Fan S>F 39–39 Fan Min 40–254 No Func 255–255 Max
8	Color Add WW	0	
9	Color Add CW	0	
10	Color Add WW	0	
11	Color Add CW	0	
12	Color Add WW	0	
13	Color Add CW	0	
14	Color Add WW	0	
15	Color Add CW	0	
16	Color Add WW	0	

20 DMX Pix

20 channels

Ch	Function	Default	DMX values
1	Dimmer	0	0–254 Closed 255–255 Open
2	Dimmer Fine	0	Fine byte of Dimmer
3	Shutter / Strobe	50	0–31 Close 32–63 Open 64–94 Strobe Min 95–95 Strobe Max 96–127 Open 128–142 Pulse Open Min 143–143 pulse Open Max 144–158 Pulse Close Max 159–159 Pulse Close Min 160–191 Open 192–222 Random Min 223–223 Random Max 224–255 Open
4	Color Add WW	0	
5	Color Add WW Fine	0	Fine byte of Color Add WW
6	Color Add CW	0	
7	Color Add CW Fine	0	Fine byte of Color Add CW
8	C TO	0	0–15 No Func 16–254 2700K 255–255 8000K
9	Color Macro1	0	0–15 No Func 16–27 Macro 1 28–39 Macro 2 40–51 Macro 3 52–63 Macro 4 64–75 Macro 5 76–87 Macro 6 88–99 Macro 7 100–111 Macro 8 112–123 Macro 9 124–135 Macro 10 136–147 Macro 11 148–159 Macro 12 160–171 Macro 13 172–183 Macro 14 184–195 Macro 15 196–207 Sound 1 208–219 Sound 2 220–231 Sound 3 232–243 Sound 4 244–255 Sound 5
10	Color Macro1Rate	0	0–19 Min 20–20 Fan Auto 21–38 Fan S>F 39–39 Fan Min 40–254 No Func 255–255 Max
11	Color Add WW	0	
12	Color Add CW	0	
13	Color Add WW	0	
14	Color Add CW	0	
15	Color Add WW	0	
16	Color Add CW	0	

20 DMX Pix (continued)

Ch	Function	Default	DMX values
17	Color Add WW	0	
18	Color Add CW	0	
19	Color Add WW	0	
20	Dimmer Curve	0	0–19 No Func 20–39 Linear 40–59 S-Curve 60–79 Square 80–99 Inv Square 100–255 No Func