
Starway

LSE_Stickolor

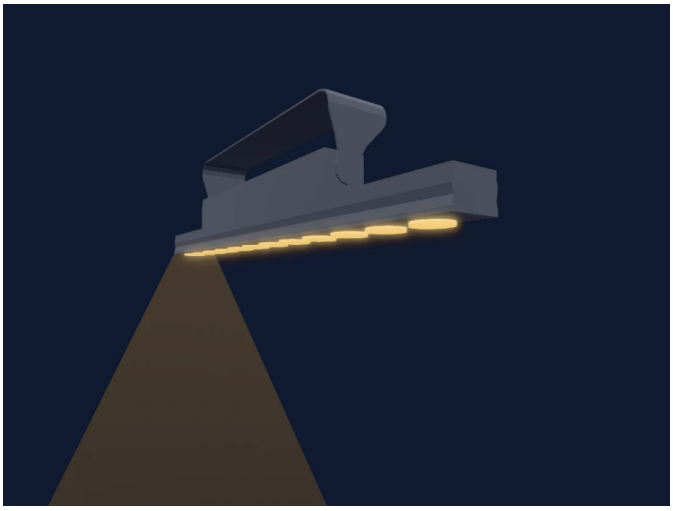

Manufacturer	**Starway**
Type	**PAR**
DMX modes	**5**
DMX footprint	**8, 10, 72, 76 channels**
Beam angle	**50°**
Heads / cells	**13**
Size (W × H × D)	**500 × 130 × 100 mm**
GDTF fixture type	**55349CB3-3DF1-443C-B4AF-D6…**

Controls

Extra LED colours · RGB colour mixing · Colour wheel · Dimmer · Pixel control

DMX modes

6 Channel	8 ch
8 Channel	8 ch
10 Channel	10 ch
72 Channel	72 ch
76 Channel	76 ch

6 Channel

8 channels

Ch	Function	Default	DMX values
1	Reserved 1	0	
2	Reserved 2	0	
3	Red	255	
4	Green	255	
5	Blue	255	
6	White	0	
7	Color Add RY	0	
8	UV	0	

8 Channel

8 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Strobe Mode Strobe	0	
3	Red	255	
4	Green	255	
5	Blue	255	
6	White	0	
7	Color Add RY	0	
8	UV	0	

10 Channel

10 channels

Ch	Function	Default	DMX values
1	Dimmer	0	
2	Strobe Mode Strobe	0	
3	Red	255	
4	Green	255	
5	Blue	255	
6	White	0	
7	Color Add RY	0	
8	UV	0	

10 Channel (continued)

Ch	Function	Default	DMX values
9	Color Wheel	0	0–9 Open 10–17 Red (wheel slot 1) 18–25 Green (wheel slot 2) 26–33 Blue (wheel slot 3) 34–41 White (wheel slot 4) 42–49 Amber (wheel slot 5) 50–57 UV (wheel slot 6) 58–65 V W UV (wheel slot 7) 66–73 V A UV (wheel slot 8) 74–81 B W A (wheel slot 9) 82–89 B W UV (wheel slot 10) 90–97 R B W UV (wheel slot 11) 98–105 R B A UV (wheel slot 12) 106–113 R W A UV (wheel slot 13) 114–121 V B W A (wheel slot 14) 122–129 R V B W A UV (wheel slot 15) 130–137 Dream 138–145 Meteor 146–153 Fade 154–161 Change 162–169 Flow 1 170–177 Flow 2 178–185 Flow 3 186–193 Flow 4 194–201 Flow 5 202–209 Flow 6 210–217 Flow 7 218–225 Flow 8 226–233 Flow 9 234–241 Flow 10 242–255 Audio
10	Color Wheel Select MSpeed	0	

72 Channel

72 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Add RY	0	
6	UV	0	
7	Red	255	
8	Green	255	
9	Blue	255	
10	White	0	
11	Color Add RY	0	
12	UV	0	
13	Red	255	
14	Green	255	
15	Blue	255	
16	White	0	
17	Color Add RY	0	
18	UV	0	

72 Channel (continued)

Ch	Function	Default	DMX values
19	Red	255	
20	Green	255	
21	Blue	255	
22	White	0	
23	Color Add RY	0	
24	UV	0	
25	Red	255	
26	Green	255	
27	Blue	255	
28	White	0	
29	Color Add RY	0	
30	UV	0	
31	Red	255	
32	Green	255	
33	Blue	255	
34	White	0	
35	Color Add RY	0	
36	UV	0	
37	Red	255	
38	Green	255	
39	Blue	255	
40	White	0	
41	Color Add RY	0	
42	UV	0	
43	Red	255	
44	Green	255	
45	Blue	255	
46	White	0	
47	Color Add RY	0	
48	UV	0	
49	Red	255	
50	Green	255	
51	Blue	255	
52	White	0	
53	Color Add RY	0	
54	UV	0	
55	Red	255	
56	Green	255	
57	Blue	255	
58	White	0	
59	Color Add RY	0	
60	UV	0	
61	Red	255	
62	Green	255	
63	Blue	255	

72 Channel (continued)

Ch	Function	Default	DMX values
64	White	0	
65	Color Add RY	0	
66	UV	0	
67	Red	255	
68	Green	255	
69	Blue	255	
70	White	0	
71	Color Add RY	0	
72	UV	0	

76 Channel

76 channels

Ch	Function	Default	DMX values
1	Dimmer	255	
2	Strobe Mode Strobe	0	
3	Red	255	
4	Green	255	
5	Blue	255	
6	White	0	
7	Color Add RY	0	
8	UV	0	
9	Red	255	
10	Green	255	
11	Blue	255	
12	White	0	
13	Color Add RY	0	
14	UV	0	
15	Red	255	
16	Green	255	
17	Blue	255	
18	White	0	
19	Color Add RY	0	
20	UV	0	
21	Red	255	
22	Green	255	
23	Blue	255	
24	White	0	
25	Color Add RY	0	
26	UV	0	
27	Red	255	
28	Green	255	
29	Blue	255	
30	White	0	
31	Color Add RY	0	
32	UV	0	

76 Channel (continued)

Ch	Function	Default	DMX values
33	Red	255	
34	Green	255	
35	Blue	255	
36	White	0	
37	Color Add RY	0	
38	UV	0	
39	Red	255	
40	Green	255	
41	Blue	255	
42	White	0	
43	Color Add RY	0	
44	UV	0	
45	Red	255	
46	Green	255	
47	Blue	255	
48	White	0	
49	Color Add RY	0	
50	UV	0	
51	Red	255	
52	Green	255	
53	Blue	255	
54	White	0	
55	Color Add RY	0	
56	UV	0	
57	Red	255	
58	Green	255	
59	Blue	255	
60	White	0	
61	Color Add RY	0	
62	UV	0	
63	Red	255	
64	Green	255	
65	Blue	255	
66	White	0	
67	Color Add RY	0	
68	UV	0	
69	Red	255	
70	Green	255	
71	Blue	255	
72	White	0	
73	Color Add RY	0	
74	UV	0	

76 Channel (continued)

Ch	Function	Default	DMX values
75	Color Wheel	0	0–9 Open 10–17 Red (wheel slot 1) 18–25 Green (wheel slot 2) 26–33 Blue (wheel slot 3) 34–41 White (wheel slot 4) 42–49 Amber (wheel slot 5) 50–57 UV (wheel slot 6) 58–65 V W UV (wheel slot 7) 66–73 V A UV (wheel slot 8) 74–81 B W A (wheel slot 9) 82–89 B W UV (wheel slot 10) 90–97 R B W UV (wheel slot 11) 98–105 R B A UV (wheel slot 12) 106–113 R W A UV (wheel slot 13) 114–121 V B W A (wheel slot 14) 122–129 R V B W A UV (wheel slot 15) 130–137 Dream 138–145 Meteor 146–153 Fade 154–161 Change 162–169 Flow 1 170–177 Flow 2 178–185 Flow 3 186–193 Flow 4 194–201 Flow 5 202–209 Flow 6 210–217 Flow 7 218–225 Flow 8 226–233 Flow 9 234–241 Flow 10 242–255 Audio
76	Color Wheel Select MSpeed	0	