
Terbly

GL10WP

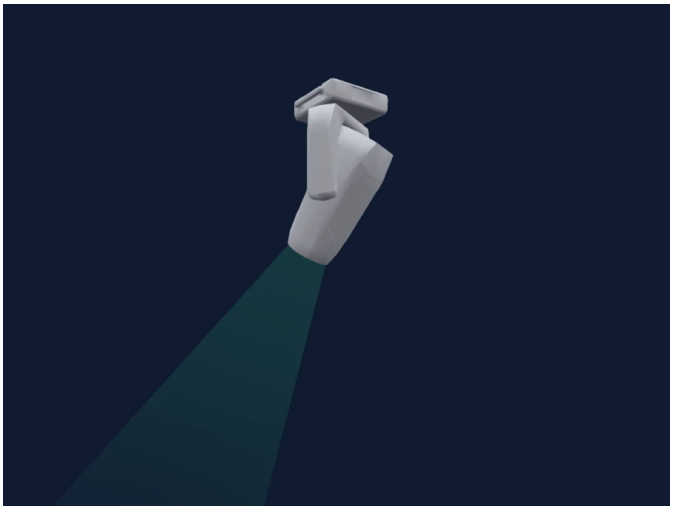

Manufacturer	**Terbly**
Type	**Profile spot**
DMX modes	**2**
DMX footprint	**39, 62 channels**
Beam angle	**11.4-52°**
Pan range	**540°**
Tilt range	**250°**
Size (W × H × D)	**338 × 646 × 277 mm**
GDTF fixture type	**8B811CAD-A080-46FD-8351-08…**

Controls

Focus · Frost · Iris · Zoom · CMY colour mixing · Colour temperature · Colour wheel · Strobe · Dimmer · Pan and tilt · Movement speed · Gobos · Gobo rotation

Safety-relevant functions

Fixture reset

DMX modes

Standard	39 ch
Extended	62 ch

Standard

39 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	0–224 max 225–225 min 226–235 BO by Movement 236–255 BO by all Wheel
6	Shutter / Strobe	63	0–31 Closed 32–63 Open 64–94 min Strobe 95–95 max Strobe 96–127 Open 128–158 min Pulse 159–159 max Pulse 160–191 Open 192–222 Random · min Rnd 1–24.2 Hz 223–223 Random · maxRnd 25 Hz 224–255 Open
7	Dimmer	0	0–254 Closed 255–255 Open
8	Dimmer Curve	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architecural 81–100 Theatre 101–255 Default to Unit Setting
9	Zoom	127	0–126 narrow 127–254 normal 255–255 wide
10	Focus	127	
11	Focus1Distance	0	0–50 No function 51–100 Heavy Wash mode 101–255 Light Wash mode
12	Focus1Adjust	128	
13	Color Wheel	0	0–19 Open (wheel slot 1) 20–37 Red (wheel slot 2) 38–55 Blue (wheel slot 3) 56–73 Green (wheel slot 4) 74–91 Orange (wheel slot 5) 92–109 Magenta (wheel slot 6) 110–127 UV Filter (wheel slot 7) 128–128 >>> 129–188 >> 189–189 > 190–193 Stop 194–194 < 195–254 << 255–255 <<<

Standard (continued)

Ch	Function	Default	DMX values
14	Color Wheel 2	0	0–19 Open (wheel slot 1) 20–37 Light Pink (wheel slot 2) 38–55 Purple (wheel slot 3) 56–73 Light Green (wheel slot 4) 74–91 Light Amber (wheel slot 5) 92–109 Yellow (wheel slot 6) 110–127 CTB (wheel slot 7) 128–128 >>> 129–188 >> 189–189 > 190–193 Stop 194–194 < 195–254 << 255–255 <<<
15	Cyan	0	
16	Magenta	0	
17	Yellow	0	
18	Color Sub R	0	
19	Color Sub G	0	
20	Color Sub B	0	
21	C TO	0	
22	Color Macro1	0	0–31 Safe 32–39 Macro 1 40–47 Macro 2 48–55 Macro 3 56–63 Macro 4 64–71 Macro 5 72–79 Macro 6 80–87 Macro 7 88–95 Macro 8 96–103 Macro 9 104–111 Macro 10 112–119 Macro 11 120–127 Macro 12 128–135 Macro 13 136–143 Macro 14 144–151 Macro 15 152–159 Macro 16 160–167 Macro 17 168–175 Macro 18 176–183 Macro 19 184–191 Macro 20 192–199 Macro 21 200–207 Macro 22 208–215 Macro 23 216–223 Macro 24 224–231 Macro 25 232–239 Macro 26 240–247 Macro 27 248–255 Random CMY
23	Color Mix MSpeed	0	

Standard (continued)

Ch	Function	Default	DMX values
24	Gobo	0	0–9 Open (wheel slot 1) 10–19 RG1 (wheel slot 2) 20–29 RG2 (wheel slot 3) 30–39 RG3 (wheel slot 4) 40–49 RG4 (wheel slot 5) 50–59 RG5 (wheel slot 6) 60–69 RG6 (wheel slot 7) 70–77 RG7 (wheel slot 8) 78–93 RG1 Shake (wheel slot 2) 94–109 RG2 Shake (wheel slot 3) 110–125 RG3 Shake (wheel slot 4) 126–141 RG4 Shake (wheel slot 5) 142–157 RG5 Shake (wheel slot 6) 158–173 RG6 Shake (wheel slot 7) 174–189 RG7 Shake (wheel slot 8) 190–190 >>> 191–220 >> 221–221 > 222–223 Stop 224–224 < 225–254 << 255–255 <<<
25	Gobo Rotation	0	0–126 zero 127–127 max Index 128–128 >>> 129–188 >> 189–189 > 190–193 Stop 194–194 < 195–254 << 255–255 <<<
26	Iris	0	0–190 Open 191–191 Closed 192–222 Pulse closing fast 223–223 Pulse closing slow 224–254 Pulse opening slow 255–255 Pulse opening fast
27	Frost1	0	0–99 Heavy Wash mode 100–155 Mid Wash mode 156–205 Light Wash mode 206–255 Spot mode
28	Blade1B	0	0–254 Open 255–255 Closed
29	Blade1A	0	0–254 Open 255–255 Closed
30	Blade3B	0	0–254 Open 255–255 Closed
31	Blade3A	0	0–254 Open 255–255 Closed
32	Blade2B	0	0–254 Open 255–255 Closed
33	Blade2A	0	0–254 Open 255–255 Closed
34	Blade4B	0	0–254 Open 255–255 Closed
35	Blade4A	0	0–254 Open 255–255 Closed

Standard (continued)

Ch	Function	Default	DMX values
36	Shaper Rot	128	0–127 45 Deg 128–254 0 255–255 -45 Deg
37	Frame MSpeed	0	
38	Shaper Macros	0	0–7 Safe 8–15 Macro 1 16–23 Macro 2 24–31 Macro 3 32–39 Macro 4 40–47 Macro 5 48–55 Macro 6 56–63 Macro 7 64–71 Macro 8 72–79 Macro 9 80–87 Macro 10 88–95 Macro 11 96–103 Macro 12 104–111 Macro 13 112–119 Macro 14 120–127 Macro 15 128–135 Macro 16 136–143 Macro 17 144–151 Macro 18 152–159 Macro 19 160–167 Macro 20 168–175 Macro 21 176–183 Macro 22 184–191 Macro 23 192–199 Macro 24 200–207 Macro 25 208–215 Macro 26 216–223 Macro 27 224–231 Macro 28 232–239 Macro 29 240–247 Macro 30 248–255 Macro 31
39	Control1	0	0–19 Normal 20–29 Col any pos 30–79 Col/Gobo any pos 80–84 Reset All 85–87 Reset P/T 88–90 Reset Colors 91–93 Reset Gobos 94–96 Reset Zoom 97–99 Reset Others 100–119 Internal pro 1 120–139 Internal pro 2 140–159 Internal pro 3 160–179 Internal pro 4 180–199 Internal pro 5 200–219 Internal pro 6 220–255 Internal pro 7

Extended

62 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	

Extended (continued)

Ch	Function	Default	DMX values
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	0–224 max 225–225 min 226–235 BO by Movement 236–255 BO by all Wheel
6	Shutter / Strobe	63	0–31 Closed 32–63 Open 64–94 min Strobe 95–95 max Strobe 96–127 Open 128–158 min Pulse 159–159 max Pulse 160–191 Open 192–222 Random · min Rnd 1–24.2 Hz 223–223 Random · maxRnd 25 Hz 224–255 Open
7	Dimmer	0	0–254 Closed 255–255 Open
8	Dimmer Fine	0	Fine byte of Dimmer
9	Dimmer Curve	0	0–20 Standard 21–40 Stage 41–60 TV 61–80 Architecural 81–100 Theatre 101–255 Default to Unit Setting
10	Zoom	127	0–126 narrow 127–254 normal 255–255 wide
11	Zoom Fine	127	Fine byte of Zoom
12	Focus	127	
13	Focus Fine	127	Fine byte of Focus
14	Focus1Distance	0	0–50 No function 51–100 Heavy Wash mode 101–255 Light Wash mode
15	Focus1Adjust	128	
16	Color Wheel	0	0–19 Open (wheel slot 1) 20–37 Red (wheel slot 2) 38–55 Blue (wheel slot 3) 56–73 Green (wheel slot 4) 74–91 Orange (wheel slot 5) 92–109 Magenta (wheel slot 6) 110–127 UV Filter (wheel slot 7) 128–128 >>> 129–188 >> 189–189 > 190–193 Stop 194–194 < 195–254 < 255–255 <<<
17	Color Wheel Fine	0	Fine byte of Color Wheel

Extended (continued)

Ch	Function	Default	DMX values
18	Color Wheel 2	0	0–19 Open (wheel slot 1) 20–37 Light Pink (wheel slot 2) 38–55 Purple (wheel slot 3) 56–73 Light Green (wheel slot 4) 74–91 Light Amber (wheel slot 5) 92–109 Yellow (wheel slot 6) 110–127 CTB (wheel slot 7) 128–128 >>> 129–188 >> 189–189 > 190–193 Stop 194–194 < 195–254 << 255–255 <<<
19	Color Wheel 2 Fine	0	Fine byte of Color Wheel 2
20	Cyan	0	
21	Cyan Fine	0	Fine byte of Cyan
22	Magenta	0	
23	Magenta Fine	0	Fine byte of Magenta
24	Yellow	0	
25	Yellow Fine	0	Fine byte of Yellow
26	Color Sub R	0	
27	Color Sub R Fine	0	Fine byte of Color Sub R
28	Color Sub G	0	
29	Color Sub G Fine	0	Fine byte of Color Sub G
30	Color Sub B	0	
31	Color Sub B Fine	0	Fine byte of Color Sub B
32	C TO	0	
33	C TO Fine	0	Fine byte of C TO

Extended (continued)

Ch	Function	Default	DMX values
34	Color Macro1	0	0–31 Safe 32–39 Macro 1 40–47 Macro 2 48–55 Macro 3 56–63 Macro 4 64–71 Macro 5 72–79 Macro 6 80–87 Macro 7 88–95 Macro 8 96–103 Macro 9 104–111 Macro 10 112–119 Macro 11 120–127 Macro 12 128–135 Macro 13 136–143 Macro 14 144–151 Macro 15 152–159 Macro 16 160–167 Macro 17 168–175 Macro 18 176–183 Macro 19 184–191 Macro 20 192–199 Macro 21 200–207 Macro 22 208–215 Macro 23 216–223 Macro 24 224–231 Macro 25 232–239 Macro 26 240–247 Macro 27 248–255 Random CMY
35	Color Mix MSpeed	0	
36	Gobo	0	0–9 Open (wheel slot 1) 10–19 RG1 (wheel slot 2) 20–29 RG2 (wheel slot 3) 30–39 RG3 (wheel slot 4) 40–49 RG4 (wheel slot 5) 50–59 RG5 (wheel slot 6) 60–69 RG6 (wheel slot 7) 70–77 RG7 (wheel slot 8) 78–93 RG1 Shake (wheel slot 2) 94–109 RG2 Shake (wheel slot 3) 110–125 RG3 Shake (wheel slot 4) 126–141 RG4 Shake (wheel slot 5) 142–157 RG5 Shake (wheel slot 6) 158–173 RG6 Shake (wheel slot 7) 174–189 RG7 Shake (wheel slot 8) 190–190 >>> 191–220 >> 221–221 > 222–223 Stop 224–224 < 225–254 < 255–255 <<<
37	Gobo Rotation	0	0–126 zero 127–127 max Index 128–128 >>> 129–188 >> 189–189 > 190–193 Stop 194–194 < 195–254 < 255–255 <<<

Extended (continued)

Ch	Function	Default	DMX values
38	Gobo Rotation Fine	0	Fine byte of Gobo Rotation
39	Iris	0	0–190 Open 191–191 Closed 192–222 Pulse closing fast 223–223 Pulse closing slow 224–254 Pulse opening slow 255–255 Pulse opening fast
40	Iris Fine	0	Fine byte of Iris
41	Frost1	0	0–99 Heavy Wash mode 100–155 Mid Wash mode 156–205 Light Wash mode 206–255 Spot mode
42	Blade1B	0	0–254 Open 255–255 Closed
43	Blade1B Fine	0	Fine byte of Blade1B
44	Blade1A	0	0–254 Open 255–255 Closed
45	Blade1A Fine	0	Fine byte of Blade1A
46	Blade3B	0	0–254 Open 255–255 Closed
47	Blade3B Fine	0	Fine byte of Blade3B
48	Blade3A	0	0–254 Open 255–255 Closed
49	Blade3A Fine	0	Fine byte of Blade3A
50	Blade2B	0	0–254 Open 255–255 Closed
51	Blade2B Fine	0	Fine byte of Blade2B
52	Blade2A	0	0–254 Open 255–255 Closed
53	Blade2A Fine	0	Fine byte of Blade2A
54	Blade4B	0	0–254 Open 255–255 Closed
55	Blade4B Fine	0	Fine byte of Blade4B
56	Blade4A	0	0–254 Open 255–255 Closed
57	Blade4A Fine	0	Fine byte of Blade4A
58	Shaper Rot	128	0–127 45 Deg 128–254 0 255–255 -45 Deg
59	Shaper Rot Fine	128	Fine byte of Shaper Rot
60	Frame MSpeed	0	

Extended (continued)

Ch	Function	Default	DMX values
61	Shaper Macros	0	0–7 Safe 8–15 Macro 1 16–23 Macro 2 24–31 Macro 3 32–39 Macro 4 40–47 Macro 5 48–55 Macro 6 56–63 Macro 7 64–71 Macro 8 72–79 Macro 9 80–87 Macro 10 88–95 Macro 11 96–103 Macro 12 104–111 Macro 13 112–119 Macro 14 120–127 Macro 15 128–135 Macro 16 136–143 Macro 17 144–151 Macro 18 152–159 Macro 19 160–167 Macro 20 168–175 Macro 21 176–183 Macro 22 184–191 Macro 23 192–199 Macro 24 200–207 Macro 25 208–215 Macro 26 216–223 Macro 27 224–231 Macro 28 232–239 Macro 29 240–247 Macro 30 248–255 Macro 31
62	Control1	0	0–19 Normal 20–29 Col any pos 30–79 Col/Gobo any pos 80–84 Reset All 85–87 Reset P/T 88–90 Reset Colors 91–93 Reset Gobos 94–96 Reset Zoom 97–99 Reset Others 100–119 Internal pro 1 120–139 Internal pro 2 140–159 Internal pro 3 160–179 Internal pro 4 180–199 Internal pro 5 200–219 Internal pro 6 220–255 Internal pro 7