
Terbly

PB75-RF

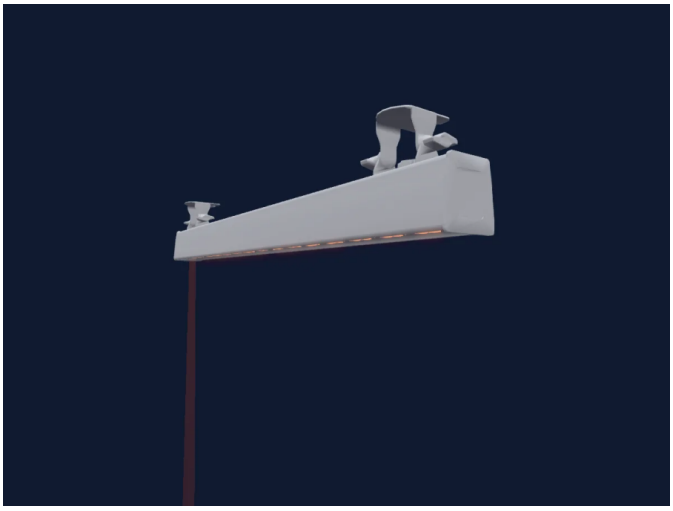

Manufacturer	**Terbly**
Type	**PAR**
DMX modes	**5**
DMX footprint	**5, 6, 9, 25, 28 channels**
Beam angle	**1.5°**
Heads / cells	**5**
Size (W × H × D)	**1003 × 156 × 91 mm**
GDTF fixture type	**FA9A0565-2657-4618-83F7-89E...**

Controls

Extra LED colours · RGB colour mixing · Strobe · Dimmer · Pixel control

Safety-relevant functions

Service functions

DMX modes

5Channel	5 ch
6Channel	6 ch
9Channel	9 ch
25Channel	25 ch
28Channel	28 ch

5Channel

5 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Add RY	0	

6Channel

6 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Add RY	0	
6	Dimmer	0	0–254 Closed 255–255 Open

9Channel

9 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Add RY	0	
6	Control1	0	0–10 No function 11–40 Internal program 1 41–70 Internal program 2 71–100 Internal program 3 101–130 Internal program 4 131–160 Internal program 5 161–190 Internal program 6 191–220 Internal program 7 221–255 Internal program 8
7	Shutter / Strobe	63	0–31 Closed 32–63 Open 64–94 min Strobe 95–95 max Strobe 96–127 Open 2 128–158 min Pulse 159–159 max Pulse 160–191 Open 3 192–222 Random · min Rnd 1–24.2 Hz 223–223 Random · maxRnd 25 Hz 224–255 Open 4
8	Dimmer	0	0–254 Closed 255–255 Open
9	Color Calibration Mode	0	0–63 White balance disabled 64–189 White balance enabled 190–250 White balance disabled 251–255 Store a new white balance

25Channel

25 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Add RY	0	
6	Red	255	
7	Green	255	
8	Blue	255	
9	White	0	
10	Color Add RY	0	
11	Red	255	
12	Green	255	
13	Blue	255	
14	White	0	
15	Color Add RY	0	
16	Red	255	
17	Green	255	
18	Blue	255	
19	White	0	
20	Color Add RY	0	
21	Red	255	
22	Green	255	
23	Blue	255	
24	White	0	
25	Color Add RY	0	

28Channel

28 channels

Ch	Function	Default	DMX values
1	Red	255	
2	Green	255	
3	Blue	255	
4	White	0	
5	Color Add RY	0	
6	Red	255	
7	Green	255	
8	Blue	255	
9	White	0	
10	Color Add RY	0	
11	Red	255	
12	Green	255	
13	Blue	255	
14	White	0	
15	Color Add RY	0	
16	Red	255	

28Channel (continued)

Ch	Function	Default	DMX values
17	Green	255	
18	Blue	255	
19	White	0	
20	Color Add RY	0	
21	Red	255	
22	Green	255	
23	Blue	255	
24	White	0	
25	Color Add RY	0	
26	Control1	0	0–10 No function 11–40 Internal program 1 41–70 Internal program 2 71–100 Internal program 3 101–130 Internal program 4 131–160 Internal program 5 161–190 Internal program 6 191–220 Internal program 7 221–255 Internal program 8
27	Shutter / Strobe	63	0–31 Closed 32–63 Open 64–94 min Strobe 95–95 max Strobe 96–127 Open 2 128–158 min Pulse 159–159 max Pulse 160–191 Open 3 192–222 Random · min Rnd 1–24.2 Hz 223–223 Random · maxRnd 25 Hz 224–255 Open 4
28	Dimmer	0	0–254 Closed 255–255 Open