
Varytec

Hero Wash 340FX RGBW Zoom

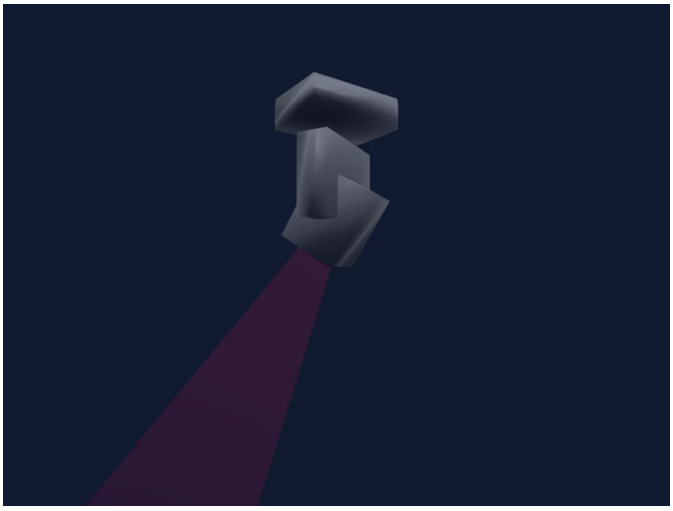

Manufacturer	**Varytec**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**16 channels**
Beam angle	**4-45°**
Pan range	**540°**
Tilt range	**220°**
Size (W × H × D)	**150 × 200 × 150 mm**
GDTF fixture type	**8810CBE6-EB66-41D5-A0A6-86…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour wheel · Strobe · Dimmer · Movement speed

Safety-relevant functions

Fixture reset · Strobe

DMX modes

16CH 16 ch

16CH

16 channels

Ch	Function	Default	DMX values
1	Pan	128	
2	Pan Fine	0	Fine byte of Pan
3	Tilt	128	
4	Tilt Fine	0	Fine byte of Tilt
5	Position MSpeed	0	
6	Dimmer	0	0–126 Min 127–254 Med 255–255 Max
7	Shutter / Strobe	0	0–9 OPEN 10–250 STROBE 251–255 OPEN
8	Color RGBRed	0	
9	Color RGBGreen	0	
10	Color RGBBlue	0	
11	White	0	
12	Color Macro1	0	0–0 No Function 1–31 2400 K 32–63 3600 K 64–95 4800 K 96–127 6000 K 128–159 7200 K 160–191 8400 K 192–223 9600 K 224–255 10800 K
13	Color Macro2	0	0–10 No Function 11–20 Red 21–30 Green 31–40 Blue 41–50 White 51–60 Red White 61–70 Green White 71–80 Blue White 81–90 Red Green 91–100 Green Blue 101–110 Red Blue 111–120 Red Green Blue 121–130 Green Blue White 131–140 Red Blue White 141–150 Red Green Blue White 151–200 Color Change 201–255 Color Fade
14	Zoom	0	0–126 Beam 127–254 Med 255–255 Wash
15	Zoom Mode Beam	0	0–100 Closed > Open 101–133 Yoyo 134–194 CCW < 195–255 CW >

16CH (continued)

Ch	Function	Default	DMX values
16	Function	0	0–10 No Function 11–20 Show 1 21–30 Show 2 31–40 Show 3 41–50 Show 4 51–60 Show 5 61–70 Show 6 71–80 Show 7 81–90 Show 8 91–230 Music Mode 231–240 Reset (3sec) 241–255 No Function