
Wieser

36x10 led Wash gleed

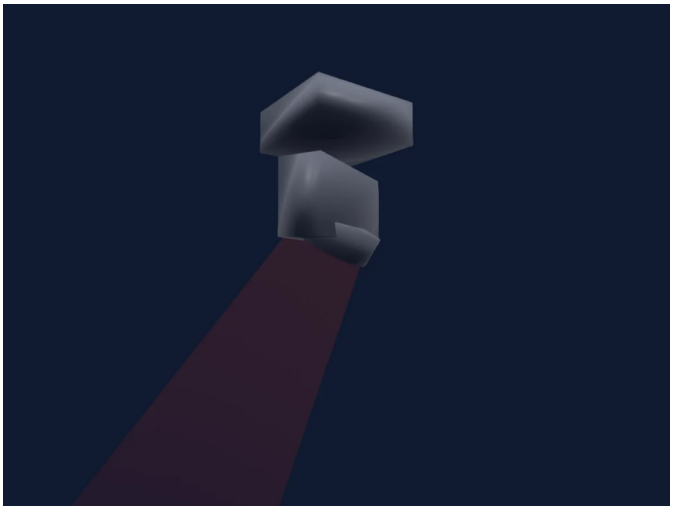

Manufacturer	**Wieser**
Type	**Moving head**
DMX modes	**1**
DMX footprint	**15 channels**
Beam angle	**10-40°**
Pan range	**630°**
Tilt range	**270°**
Size (W × H × D)	**250 × 80 × 250 mm**
GDTF fixture type	**87D23EE0-1EEE-4CD0-ADBD-B…**

Controls

Zoom · Extra LED colours · RGB colour mixing · Colour wheel · Strobe · Dimmer · Pan and tilt · Movement speed

Safety-relevant functions

Built-in effect programmes

DMX modes

15 kanal — 15 ch

15 kanal

15 channels

Ch	Function	Default	DMX values
1	Pan	127	
2	Tilt	127	
3	Zoom	127	0–0 Narrow 1–254 Medium 255–255 Wide
4	Shutter / Strobe	0	0–0 Open 1–254 Strobe · Slow 1–19.9 Hz 255–255 Strobe · Fast 20 Hz
5	Effect	255	0–0 Macro function OFF 1–25 Controller delay ON 26–50 Controller delay OFF 51–90 Program selection switch 91–130 Pulse 131–170 Jump 171–210 Gradual 211–250 Internal mode 1 251–255 Sound control
6	Dimmer	0	0–254 Closed 255–255 Open
7	Red	255	
8	Green	255	
9	Blue	255	
10	White	255	
11	Color Macro1	255	0–0 Off 1–20 Red 21–40 Yellow 41–60 Green 61–80 Cyan 81–100 Blue 101–120 Magenta 121–140 Red 141–160 R+G+B 161–170 R+G+B+W 171–200 Zero 201–205 White 1 206–210 White 2 211–215 White 3 216–220 White 4 221–225 White 5 226–230 White 6 231–235 White 7 236–240 White 8 241–245 White 9 246–250 White 10 251–255 White 11
12	Pan Fine	255	Fine byte of Pan
13	Tilt Fine	255	Fine byte of Tilt
14	Position MSpeed	0	0–254 Fast 255–255 Slow

15 kanal (continued)

Ch	Function	Default	DMX values
15	I D	0	0–9 ID 0 10–19 ID 1 20–29 ID 2 30–39 ID 3 40–49 ID 4 50–59 ID 5 60–69 ID 6 70–79 ID 7 80–89 ID 8 90–99 ID 9 100–109 ID 10 110–119 ID 11 120–129 ID 12 130–139 ID 13 140–149 ID 14 150–159 ID 15 160–169 ID 16 170–179 ID 17 180–189 ID 18 190–199 ID 19 200–209 ID 20 210–219 ID 21 220–229 ID 22 230–239 ID 23 240–249 ID 24 250–255 ID 25