
Wieser

# 36x10 Wash LED RGBWAzoom

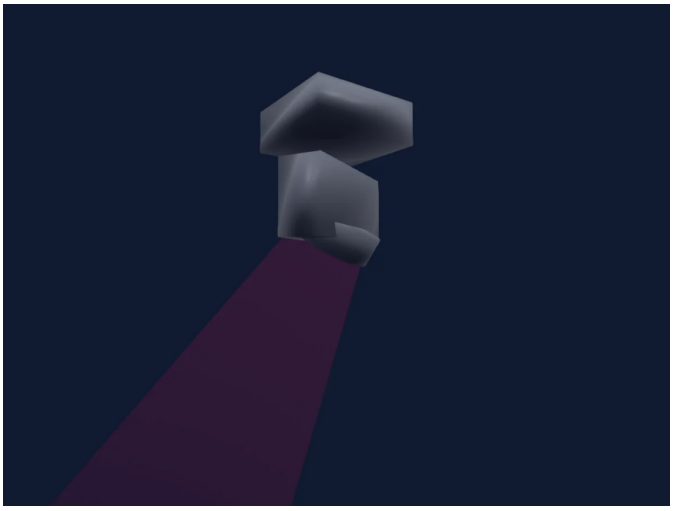

| | |
|---|---|
| Manufacturer | **Wieser** |
| Type | **Moving head** |
| DMX modes | **1** |
| DMX footprint | **16 channels** |
| Beam angle | **10-50°** |
| Pan range | **630°** |
| Tilt range | **270°** |
| Size (W × H × D) | **250 × 80 × 250 mm** |
| GDTF fixture type | **C0967196-D63C-4C96-B578-9A…** |

## Controls

Zoom · Extra LED colours · RGB colour mixing · Colour wheel · Strobe · Dimmer · Pan and tilt · Movement speed

## Safety-relevant functions

Built-in effect programmes

## DMX modes

16ch 16 ch

## 16ch

16 channels

| Ch | Function | Default | DMX values |
|---|---|---|---|
| 1 | Pan | 127 | |
| 2 | Tilt | 127 | |
| 3 | Zoom | 127 | 0–0 Narrow<br>1–254 Medium<br>255–255 Wide |
| 4 | Shutter / Strobe | 0 | 0–0 Open<br>1–254 Strobe · Slow 1–19.9 Hz<br>255–255 Strobe · Fast 20 Hz |
| 5 | Effect | 255 | 0–0 Macro function OFF<br>1–25 Controller delay ON<br>26–50 Controller delay OFF<br>51–90 Program selection switch<br>91–130 Pulse<br>131–170 Jump<br>171–210 Gradual<br>211–235 Internal mode 1<br>236–255 Sound control |
| 6 | Dimmer | 0 | 0–254 Closed<br>255–255 Open |
| 7 | Red | 255 | |
| 8 | Green | 255 | |
| 9 | Blue | 255 | |
| 10 | White | 255 | |
| 11 | Color Add Y | 0 | |
| 12 | Color Macro1 | 0 | 0–0 Off<br>1–20 Red<br>21–40 Yellow<br>41–60 Green<br>61–80 Cyan<br>81–100 Blue<br>101–120 Magenta<br>121–140 Red<br>141–160 R+G+B<br>161–170 R+G+B+W<br>171–200 Zero<br>201–205 White 1<br>206–210 White 2<br>211–215 White 3<br>216–220 White 4<br>221–225 White 5<br>226–230 White 6<br>231–235 White 7<br>236–240 White 8<br>241–245 White 9<br>246–250 White 10<br>251–255 White 11 |
| 13 | Pan Fine | 255 | Fine byte of Pan |
| 14 | Tilt Fine | 255 | Fine byte of Tilt |
| 15 | Position MSpeed | 0 | 0–254 Fast<br>255–255 Slow |

## 16ch (continued)

| Ch | Function | Default | DMX values |
|---|---|---|---|
| **16** | I D | 0 | 0–9 ID 0<br>10–19 ID 1<br>20–29 ID 2<br>30–39 ID 3<br>40–49 ID 4<br>50–59 ID 5<br>60–69 ID 6<br>70–79 ID 7<br>80–89 ID 8<br>90–99 ID 9<br>100–109 ID 10<br>110–119 ID 11<br>120–129 ID 12<br>130–139 ID 13<br>140–149 ID 14<br>150–159 ID 15<br>160–169 ID 16<br>170–179 ID 17<br>180–189 ID 18<br>190–199 ID 19<br>200–209 ID 20<br>210–219 ID 21<br>220–229 ID 22<br>230–239 ID 23<br>240–249 ID 24<br>250–255 ID 25 |